

KINGSTON


KITCHEN & BATH

INSTALLATION INSTRUCTIONS

Extension Tailpiece

Instructions:

1. Measure distance X from the bottom of the strainer to the bottom of the wide area in the P-trap.
2. Cut tailpiece to length, using a hacksaw or a tubing cutter.
3. Slide nut (A) onto the tailpiece.
4. Place rubber washer on top of the lip of the extension, Apply Teflon tape to the strainers threads.
5. Thread nut onto the strainer.
6. Once all the P-trap connections have been made, let water run into the drain, check for leaks.

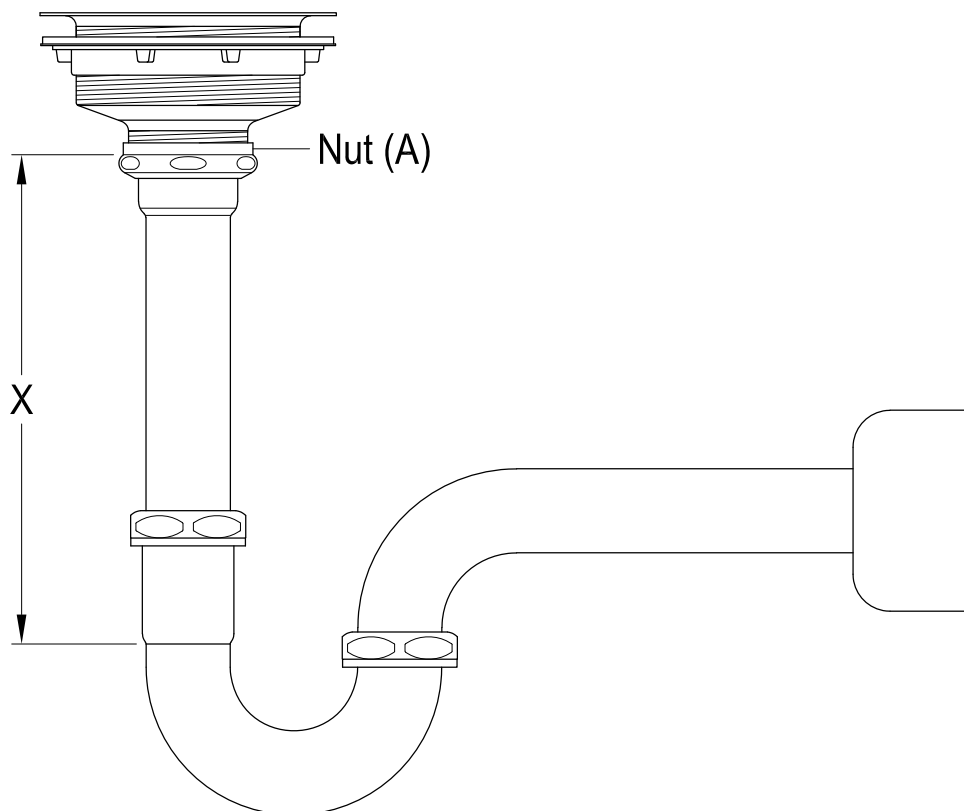

NOTICE

Failure to follow all directions may cause leaks
which may result in water damage

www.kingstonbrass.com
TOLL-FREE CUSTOMER SERVICE: 1-877-2-KBRASS
TECHNICAL SUPPORT E-mail: service@kingstonbrass.com
12775 Reservoir Street, Chino, CA 91710