

Parts List

- 61-6001
- 2 Extension Q-Bar
- 61-6002
- 1 Extension Top Foot
- 61-6003
- 1 Extension Bottom Foot
- 61-6004
- 2 Extension Legs
- 61-6005
- 1 Extension Center
- 61-6006
- 1 Extension Crossbar
- 61-6007
- 3 2 3/4" Screws
- 61-6008
- 1 Plastic Knob
- 61-6009
- 1 3 1/2" Carraige Bolt
- 61-6010
- 4 Connector Nuts
- 61-6011
- 4 Connector Bolts

5561 G Assembly Instructions

- 1) Place the Top Extension Foot over the Bottom Extension Foot with the holes aligned. Insert two 2 3/4" Screws through the Bottom Extension Foot, through the Top Extension Foot and screw into the holes in the bottom of the Extension Legs. (Figure 1)
- 2) Place the Extension Center between the Extension Legs. Insert the 3 1/2" Carraige Bolt into the top hole in the Extension Legs and secure with the Plastic Knob. (Figure 1)
- 3) Attach the Extentio Crossbar to the top of the Extension Center using a 2 3/4" Screw. (Figure 1)
- 4) If your Quilting Rods from your 5560-G Quilting Frame are assembled you will need to take them apart. Place the Extension Q-Bar in the center of the original Quilting Rods and fasten together using the Connector Nuts and Connector Bolts. (Figure 2)
- 5) Place the assembled Quilting Rods into the notches in the Notched Rails. Place the Extension Crossbar under the middle of the Quilting Rods to add support. Adjust the height as needed. (Figure 3)

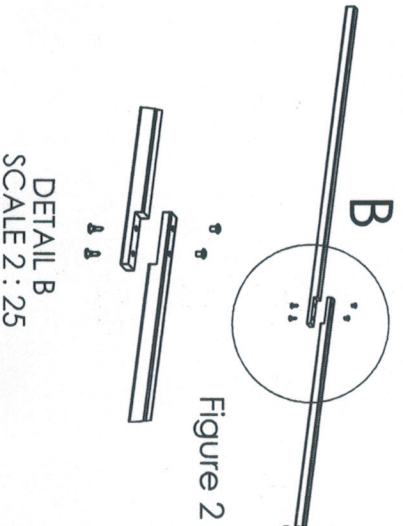


Figure 2

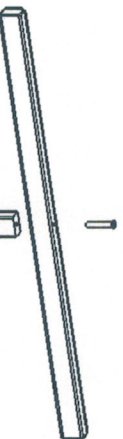


Figure 1

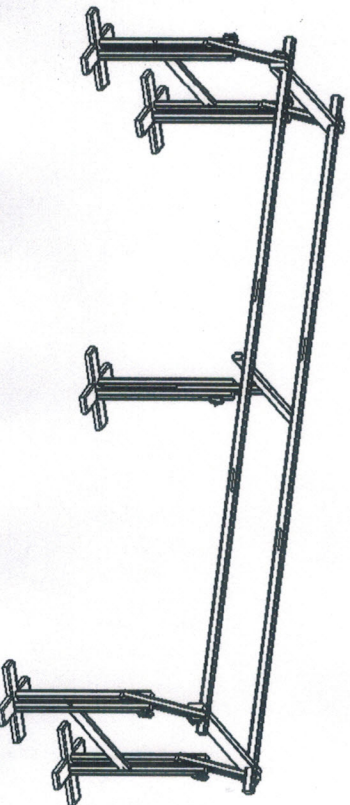


Figure 3