

Recreation Series Backboard Edge Guard

Instruction Set # R48720709

Revision Date: 3.1.2012

Installation Instructions

Carton Contents:

Quantity	Description
2	Molded Backboard Padding
10	Self-Drilling Self-Tapping Screws
10	Plastic Thread Protectors
1	11/64" Drill Bit
1	Installation Instruction Sheet

Tools Required:

- Portable Drill with Torque Adjustment
- 5/16" Socket with Extension
- Masking Tape
- Utility Knife
- Tape Measure
- Center Punch

1. Please check the contents of the carton for all of the items listed. If an item is missing, please contact your dealer.

2. Use a tape measure to mark the center-line of the backboard. Place one of the edge guards in position on the backboard. Use masking tape to hold it in position for locating the mounting holes. For best fit, line up the first edge guard with the center-line and then place the second edge guard next to the first.


3. Using a portable drill with adjustable clutch release, an 5/16" socket and extension, drill through the backboard frame and secure the pads in place with the self-drilling, self tapping screws provided. *It may be necessary to use the 11/64" drill bit to predrill on some backboards. A center punch is recommended to mark hole locations before drilling to keep drill bit from wandering.*

Note:


Adjust clutch on drill to the lowest setting to prevent stripping of the screw holes in backboard frame. Increase clutch setting only one increment at a time, until screws seat properly.

4. Make sure to collect all metal shavings to avoid personal injury, or damage to the playing floor.


5. Place the plastic protector caps over the screw ends to protect players from injury.

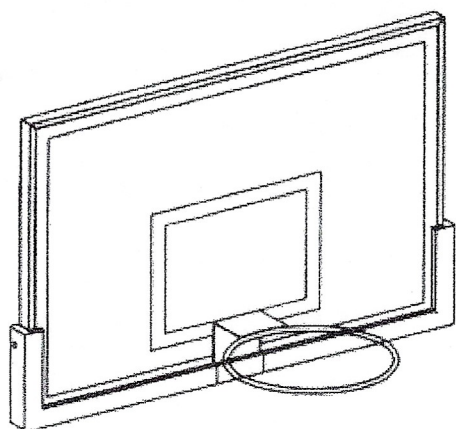

TIP: Use masking tape to hold part in place before drilling

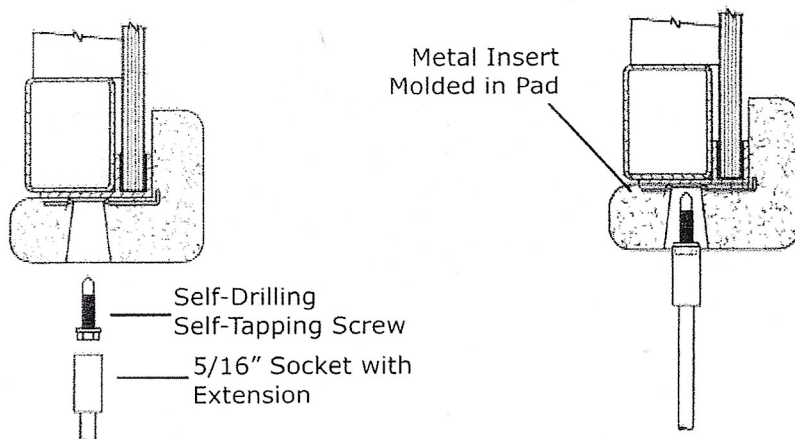

Warning: Do Not Overtighten Screws!

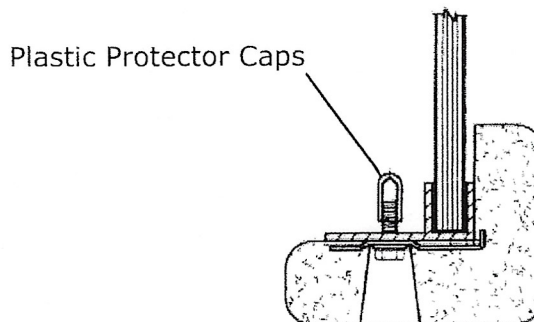

Finished Installation