



Installation Instructions



Door Cuts for Marathon™ Hinges

Use a 6" diameter dado saw 9/32" wide. Make cut equal distance from each end of door.

Step 1

Cut 9/32" wide slot at each end of door per drawing at right; keep length of slot less than 2". This hinge can be used for right or left hand doors, top or bottom mounting.

Step 2

Install hinges in door saw slots using #6 pan head screws supplied. For easy alignment and best appearance, mount hinges flush with end of slot and square with edge of door.

Step 3





Hold door in position desired with locating tabs against outside corner of frame and insert screws in center of adjusting slots.

Step 4

Swing door through full opening arc and adjust for best fit. An additional screw can be inserted in the optional set hole.

Step 5

Self-adhering bumpers supplied should be installed on back of door for quieter operation.

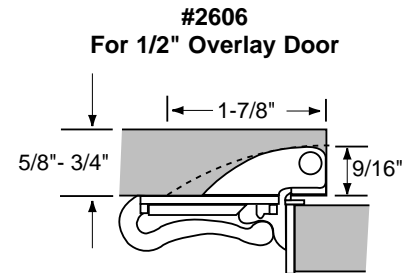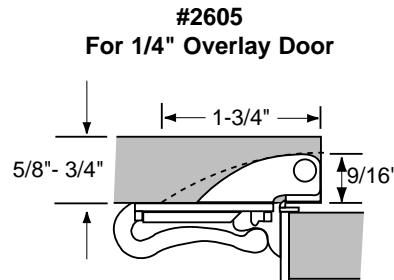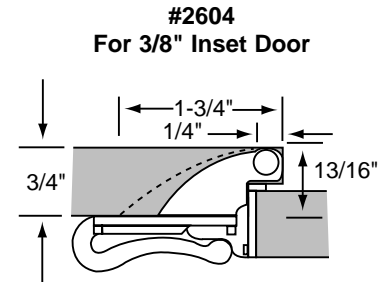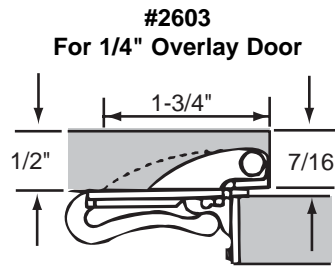

Note: Thicker doors can be used depending on edge profile.