


<u>KitchenMate</u>[™] Waste & Recycle Pullouts WR3015DNL1, WR3018DNL1, WR3021DNL1

Important Notes


- Always read the instructions completely and carefully before beginning assembly.
- Remove and check contents for damage and/or missing parts. Keep the original cartons and packing materials, which are required for any authorized adjustment by our dealers.
- These instructions are for reference only. Make sure installation procedures comply with all applicable building codes in your area.

Assembly Instructions


Step 1: Install undermount slide according to manufacturers instruction (see Figure 1).

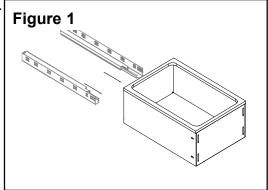

Step 2: Install 4 mounting brackets through the slots in the drawer, push them in all the way and snug the screws on the side (see Figure 2).

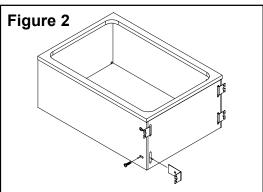


Step 3: Fasten the undermount slide to the cabinet so that the Waste and Recycle unit is centered in the cabinet with the front even with the front of the cabinet face frame (see Figure 3).

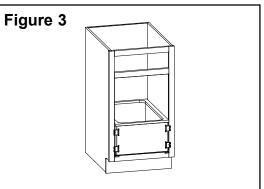



Step 4: Remove the Waste and Recycle unit from the cabinet and place on the cabinet door. Center on the door side to side and measure for the appropriate position vertically.

- Step 5: Mark the location of the slots and pre-drill a 1/16" hole and fasten to the door using 4 6 x 1/2" Washer Head Screws (see Figure 05). Some adjustment of the door position can be made by slightly loosening these screws. Once the unit and door are satisfactorily aligned proceed to Step 6.
- **Step 6:** When the door has been satisfactorily aligned tighten the 4 washer head screws and insert at least 1, 6 x 1/2" Truss Head Screw into each mounting bracket to lock the position (see Figure 06).

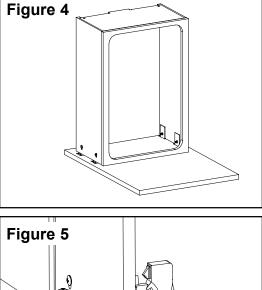

0

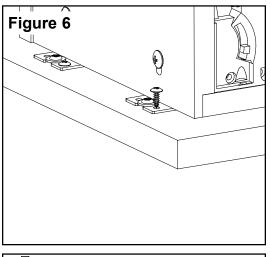

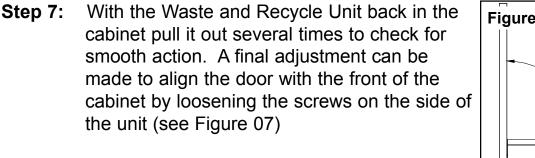

Omega National Products 1010 Rowe St. Elkhart, IN. 46516 USA www.omeganationalproducts.com

