


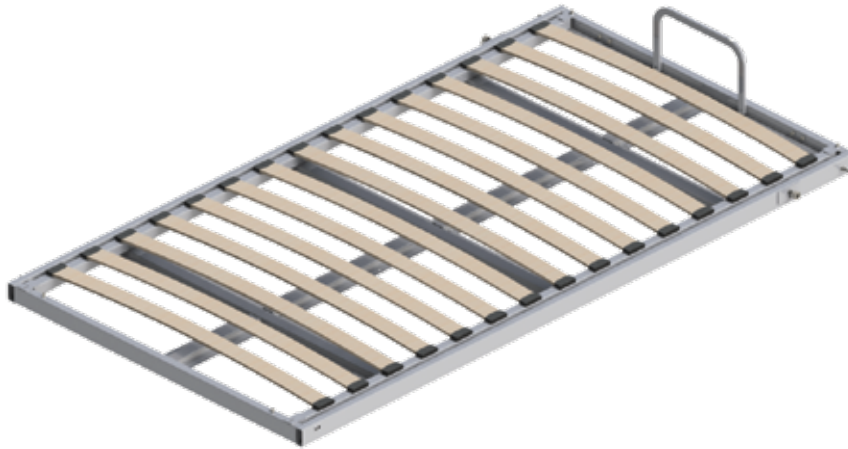





HÄFELE

Installation Instructions: Comfort slat system for twin vertical wall bed

Item Number: 271.92.261



HARDWARE LIST

			
A		Side supporting bar for slat system	x2
C		One-way clip for plywood slats	x30
E		M6 Screw	x4
F		5-ply poplar plywood comfort slat	x15
G		5mm Hex Key	x1

DANGER

The pistons are now installed, therefore, the bed will **NOT** stay down without the weight of the mattress. You **MUST** have another person hold down or sit on the bed to avoid the risk of serious injury or death from the bed slamming shut.

WARNING

This product is meant to be used with a Häfele wall bed system and needs to be installed after the wall bed has been fully and safely assembled and secured to the wall.


NOTICE

Please note that to simplify these instructions, the visual of the wall bed has been removed.

1

INSTALLING THE SIDE SUPPORTS:

Using **E** screws, secure the side supporting bars **A** in place.

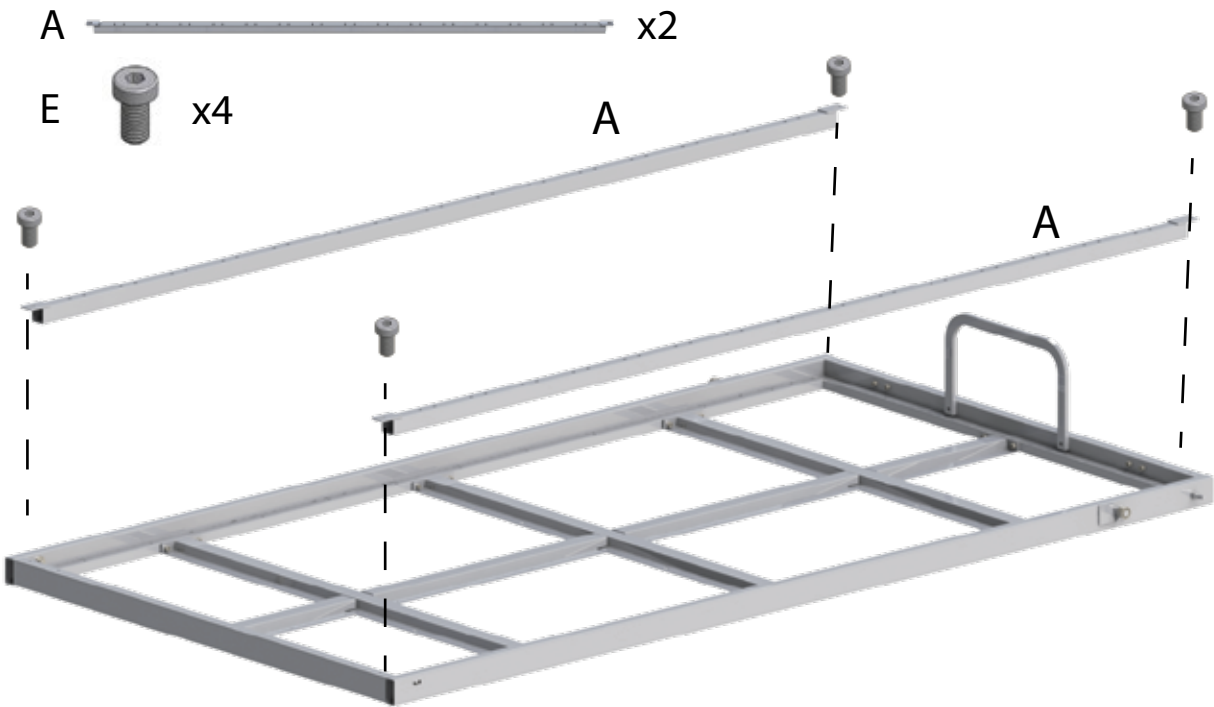

2

INSTALLING THE ONE-WAY CLIPS ON THE FIRST SIDE SUPPORT:

Take half of the one-way clips **C** and insert in place on the first side supporting bar **A**.

C x15


Recommended tool (not included):



3

INSTALLING THE REST OF THE ONE-WAY CLIPS ON THE SLATS:

Insert the one-way clips **C** on one side the wood slat until it is fully inserted. Repeat for all the slats.

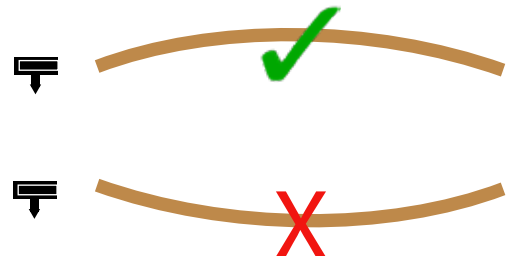


* Please make sure to place the wooden slats with the curve upwards, NOT downwards.

4

INSTALLING THE SLATS ON THE STRUCTURE:

1. Insert the end of the slat **F** in the one-way clip **C** that is already installed on the supporting bar **A**.
2. Align the pins of the one-way clip **C** into the holes of the opposite bar side supporting bar **A** and use the rubber mallet to insert into place. Repeat the process, until all the slats are installed.

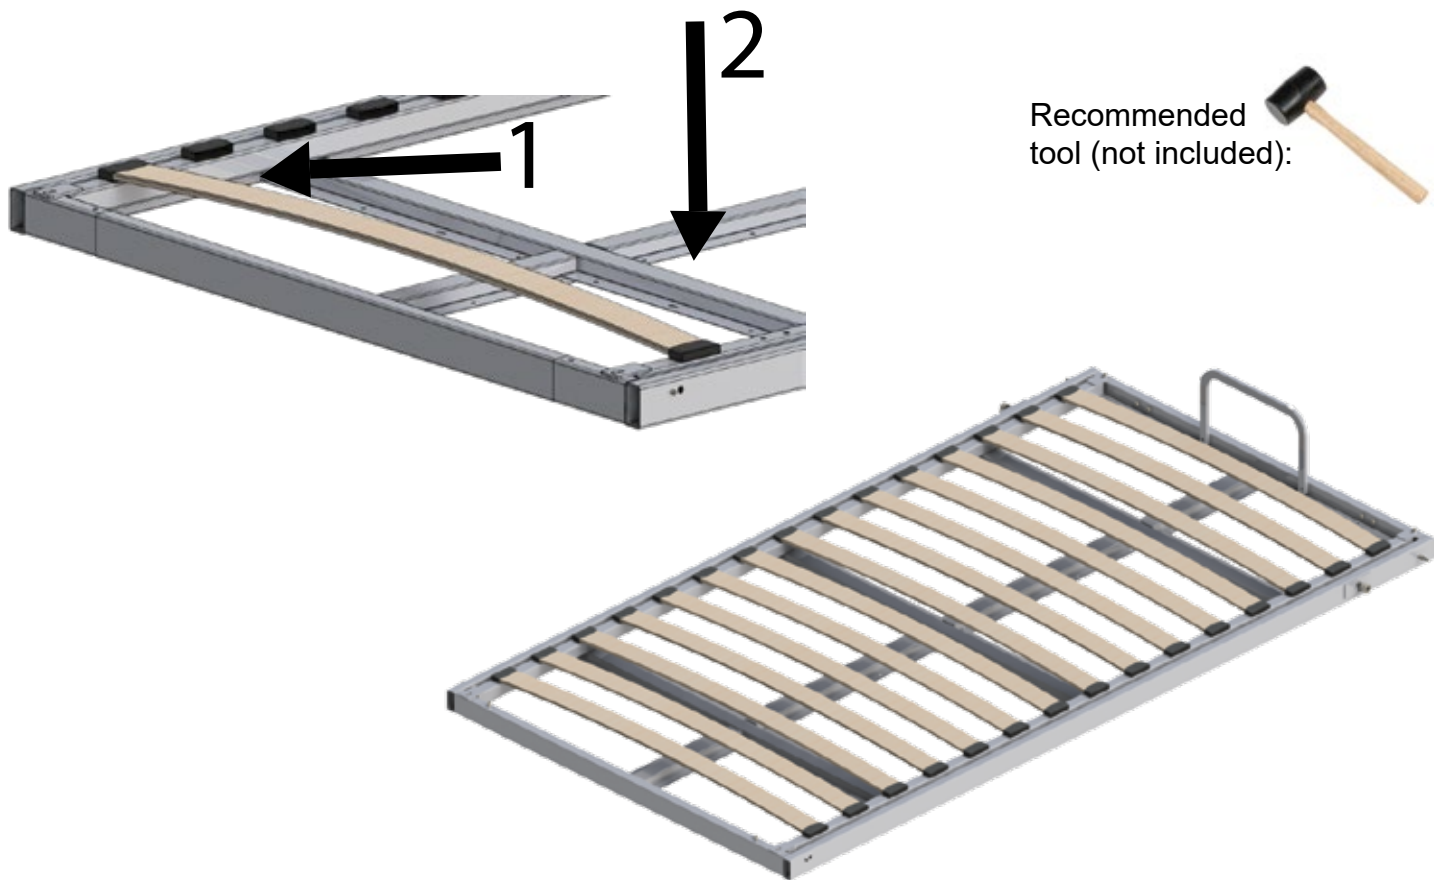

5

ADDING THE MATTRESS

At this point, you may add the mattress. Once the mattress is in place, you will be able to use the wall bed mechanism with the comfort slats in place.

