



**-- SP4 --  
(SHOULDER PAD)  
Installation Instructions**







Call Jaypro Sports Equipment at 1-800-243-0533 during regular business hours for technical support.

[www.jaypro.com](http://www.jaypro.com)

# SP4

## PARTS LIST (QTY: SINGLE UNIT)

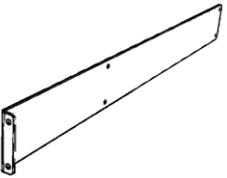ITEM	IMAGE	DESCRIPTION	QTY
1		BOTTOM UPRIGHT <i>(w/ WHEEL MOUNTS)</i>	2
2		BOTTOM UPRIGHT	2
3		TOP UPRIGHT	4
4		SIDE PLATE 1	2
5		SIDE PLATE 2 <i>(PLATE w/ LOGO CUTOUT)</i>	2
6		WHEEL <i>(IMAGE MAY DIFFER FROM WHAT'S SHOWN)</i>	4
7		#8 x 12" PAN HEAD PHILIP SCREW	8
8		5/16"-18 x 2" LONG BUTTON HD SCREW <i>(IMAGE MAY DIFFER FROM WHAT'S SHOWN)</i>	16
9		5/16"-18 x 1" LONG BUTTON HD SCREW <i>(IMAGE MAY DIFFER FROM WHAT'S SHOWN)</i>	4
10		5/16"-18 THIN NYLON LOCK NUT <i>(IMAGE MAY DIFFER FROM WHAT'S SHOWN)</i>	20
ITEM	IMAGE	DESCRIPTION	QTY

# Table of Contents

I. Assembly One Half: .....	4
II. Assemble Both Halves: .....	6
III. Install Wheels: .....	7

## **IMPORTANT NOTICE:**

- 1) BEFORE EACH USE CHECK EQUIPMENT FOR PROPER CONNECTING HARDWARE AND STRUCTURAL INTEGRITY. REPLACE DAMAGED OR MISSING HARDWARE IMMEDIATELY.
- 2) NEVER ALLOW ANYONE TO CLIMB OR HANG ON THE FRAME. AS SERIOUS INJURY OR DAMAGE TO THE EQUIPMENT MAY OCCUR.
- 3) USE OF THIS EQUIPMENT OTHER THAN INTENDED, MAY BE HAZARDOUS.
- 4) ALTERATION OR MODIFICATION OF THIS EQUIPMENT MAY BE HAZARDOUS AND RESULT IN INJURY. FOR REPAIR OR REPLACEMENT, CONTACT YOUR DEALER OR JAYPRO SPORTS.

## **Tools Require:**

- 1 Allen Wench Set
  - 1 1/2" Socket or Adjustable Wench
  - 1 Philips Screw Driver
- 
- Unpack all parts and check against parts list to ensure that all have been included.
  - Inspect all parts for damage. Report any damages to the trucking company.

## I. Assembly One Half:

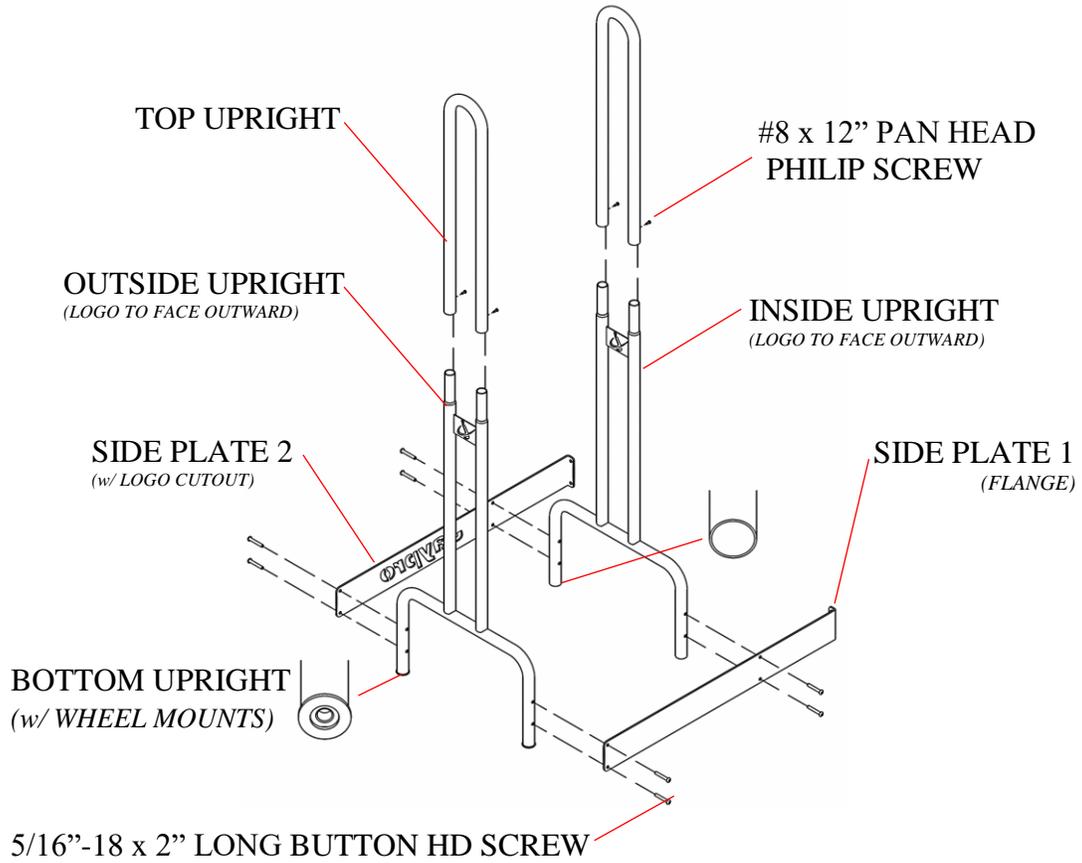


Figure 1

*NOTE ORIENTATION OF SIDE PLATE FLANGES.*

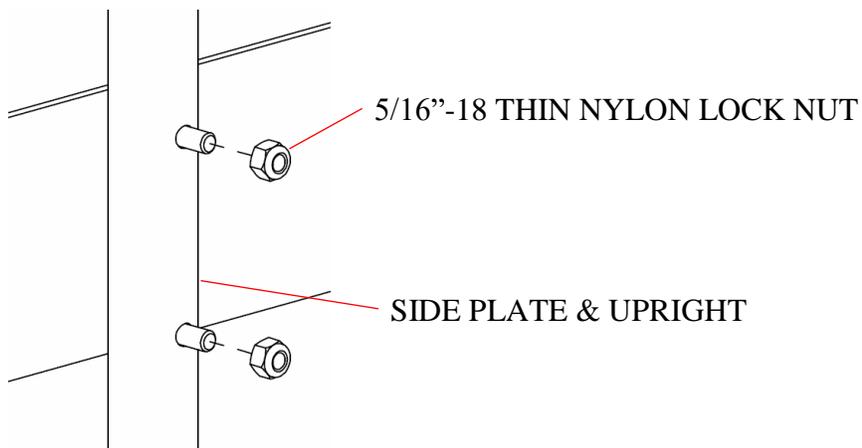


Figure 2

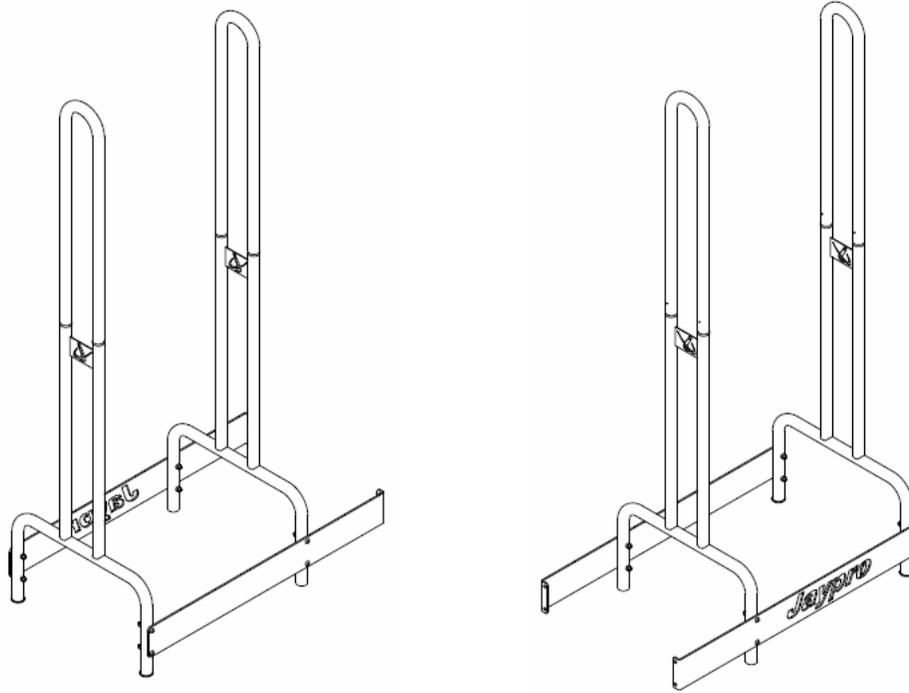


Figure 3

- 1) Assemble side plate 1 and side plate 2 onto two uprights in place using 5/16"-18 x 2" long button head screws (as shown in Figure 1). Ensure that both upright logo faces the same direction and both side plate flanges are on the same side.
- 2) Using 5/16"-18 thin nylon lock nut. To secure side plates to the uprights onto eight places (as shown in Figure 2).
- 3) Repeat steps again to create another set (Figure 3).

## II. Assemble Both Halves:

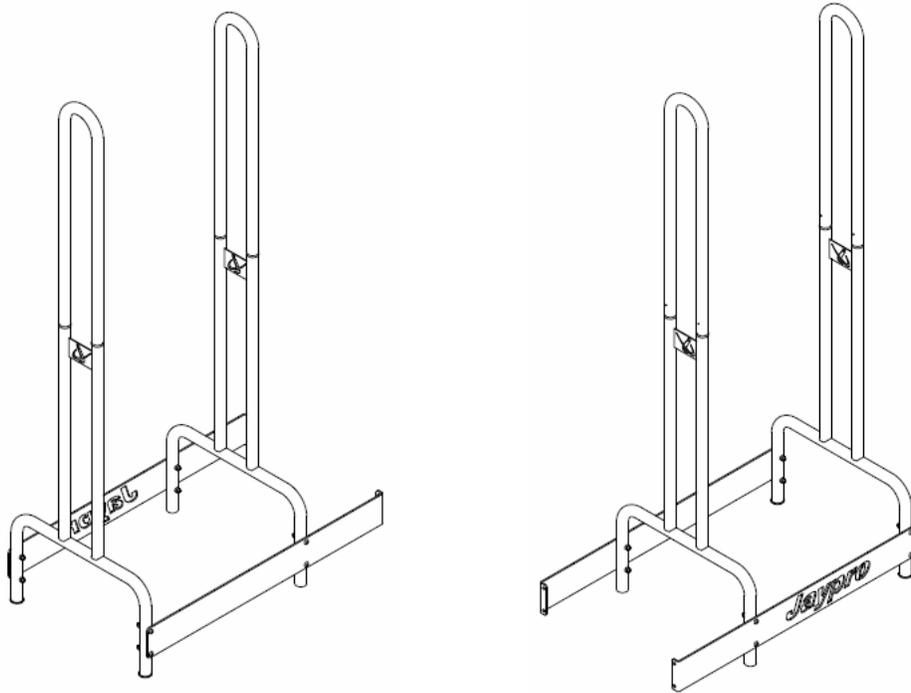


Figure 4

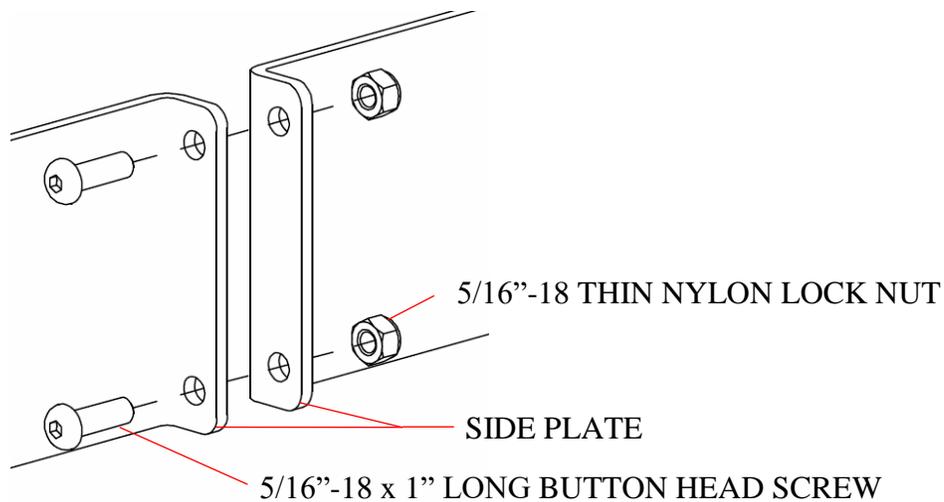


Figure 5

- 1) Orientate both halves of cart back to back (Figure 4) and line up the holes in the side plate flange.
- 2) Secure both halves together using 5/16-18 x 1" long button head screw and 5/16"-18 thin nylon lock nut (as shown in Figure 5).

### III. Install Wheels:

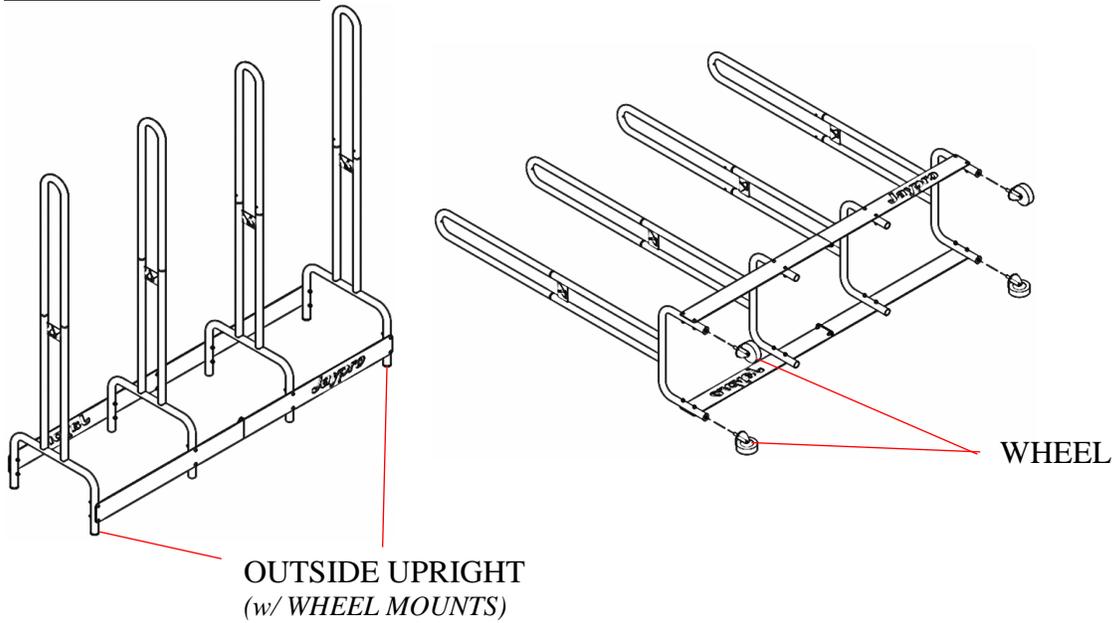


Figure 6

- 1) Carefully lay the entire frame onto its side.
- 2) Thread four wheels by hand onto the outside uprights.  
Please note only two of the uprights accept wheels.