


TE-2 ASSEMBLY INSTRUCTIONS

JAYPRO SPORTS


860-447-3001

www.jaypro.com


1. Open the package, remove all ties.

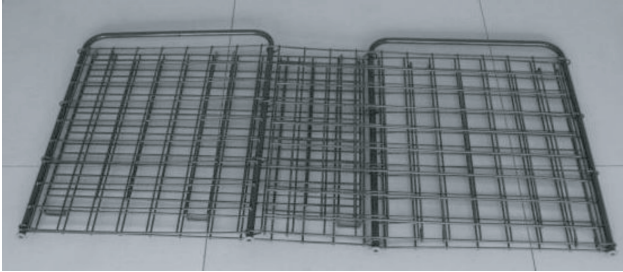

2. Unfold the ball carrier.

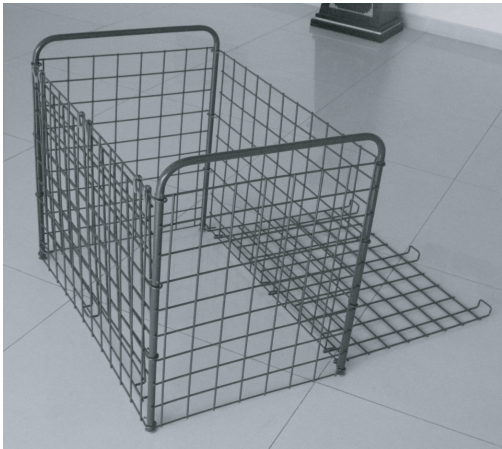

3. Pull up the lid and turn it to backside.

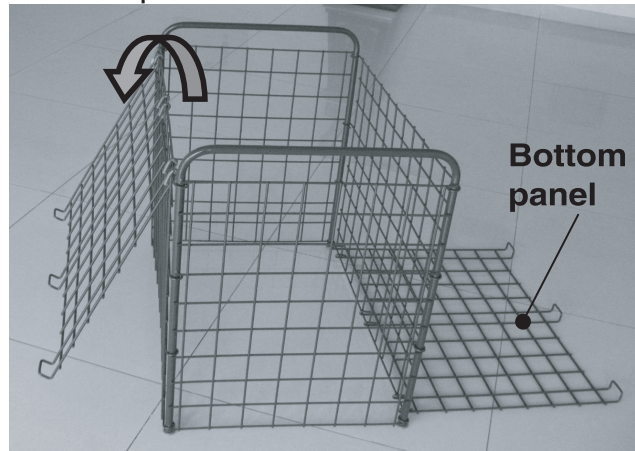

4. Place the carrier upside down. Turn the bottom panel to the bottom of carrier. Push the bottom panel all the way to make sure the wire grid tab fits over and onto the bottom grid for side panel.



5. Insert the stem of castor into the plastic bushing that was pre-installed at the bottom end of tube.



6. Well done.

