

# ASSEMBLY INSTRUCTIONS

## TE-PE01

Service No: 800-243-0533

[www.jaypro.com](http://www.jaypro.com)

### PART LIST


Item#	Description	Qty
1	Side panel	2pcs
2	Front panel	1pc
3	Back panel	1pc
4	Middle panel	1pc
5	Bottom panel	1pc
6	U Handle	1pc
7	Caster 3"	4pcs
8	Plastic bushing (pre-installed)	4pcs
9	End cap (pre-installed)	2pcs
10	Foam grip (pre-installed)	4pcs
11	Butterfly Head screw	2pcs
12	Wheel shaft assembly	1pc
13	Sink Screw M6x25mm	12pcs
14	Side cage (Optional)	2pcs



## ASSEMBLY INSTRUCTIONS:


### Step 1

Open the package, Remove all ties and protection packaging. Connect end panels to bottom panel with screw M6x25mm. Do not tighten at this time.

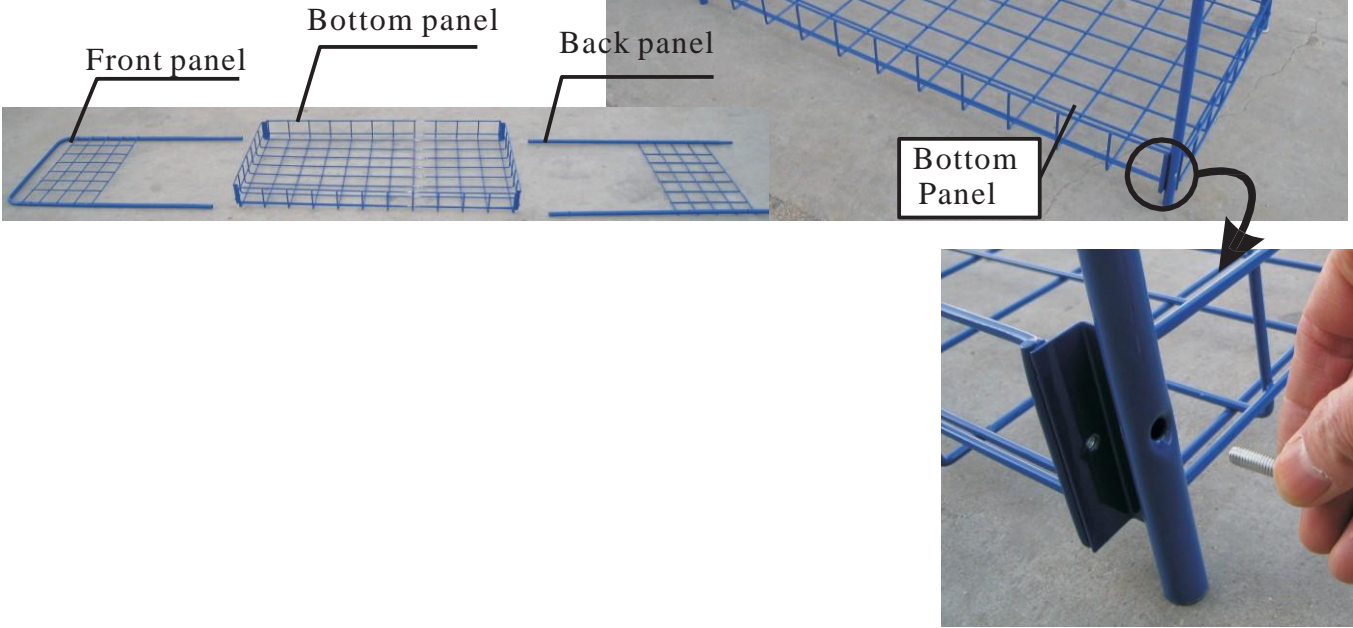

### Step 2

Connect Side panels to End panels with screw M6x25mm. Tighten all screws at this time.

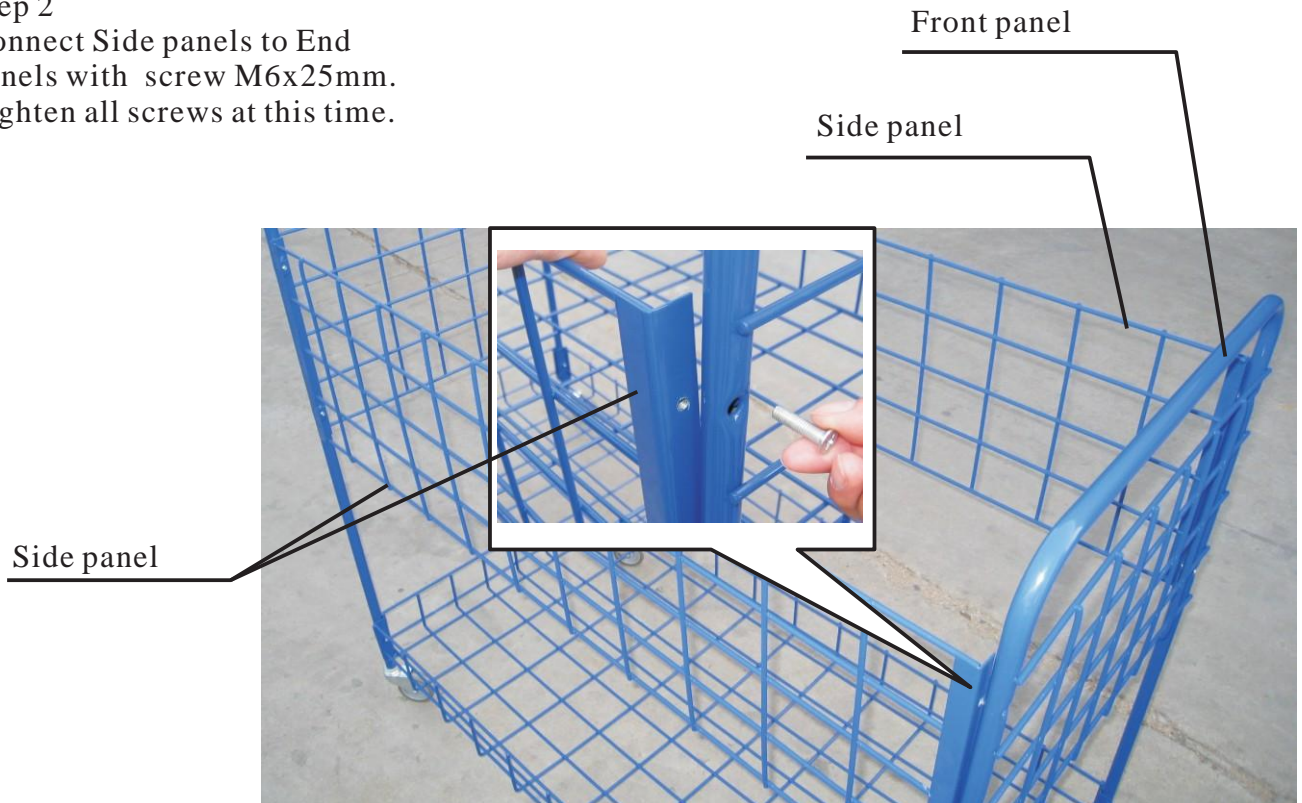




## ASSEMBLY INSTRUCTIONS:

### Step 3

Place Middle panel between Side panels, push the Middle panel all the way to make sure the wire grid tab fits over and onto the bottom grid of side panel.

Middle panel

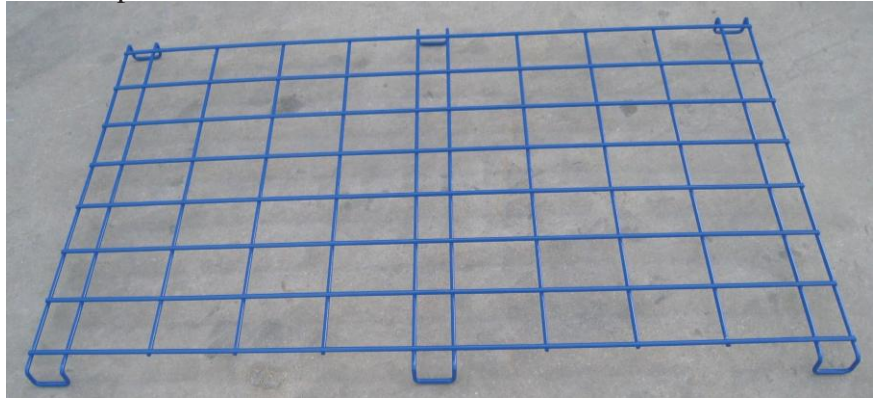

Middle panel

End panel

Side panel



### Step 4

Push the 4pcs casters all the way to the bottom end of Front and Back panel. (plastic bushing has been pre-installed at the bottom.)





## ASSEMBLY INSTRUCTIONS:

### Step 5

Slide 2 small handles on each U handles, secure it with butterfly screw.

Slide two U handles over the top of front and back panel.

Loosen butterfly screw and adjust the small handle to proper position, re-tighten the butterfly screw.

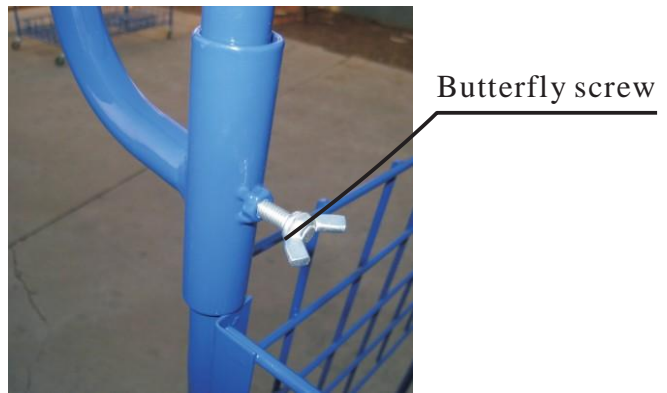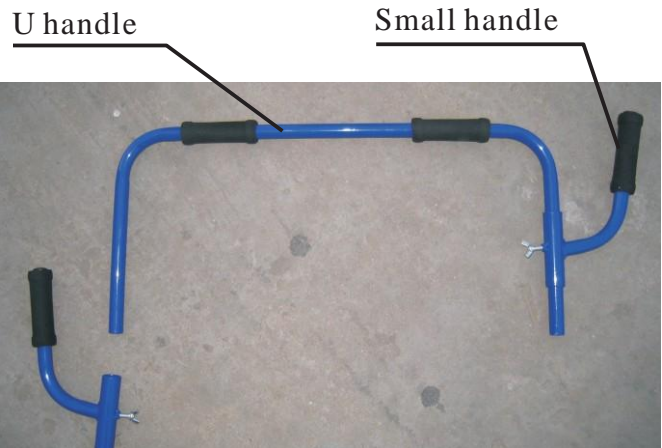

Check all the nuts and bolts to make sure all are tightened securely.

DONE

