






# OPTICAL GEL GUIDELINE FOR GULLS

1. Treat empty nests only. Otherwise allow eggs to hatch and chicks to leave first.
2. Clean flat deck area where gulls are nesting or roosting. Use protection if handling nest materials and scrubbing droppings.
3. Spray Dissolve-It over entire treatment areas.
4. Soak in for 20 minutes.
5. Rinse with water, power wash whenever possible. Scrub and remove all traces of bird droppings. Wipe off all areas to dry.
6. While damp, mist spray diluted bleach in same areas and let dry.
7. Using Barrier Bond permanent adhesive, glue disks to standard masonry bricks broken in half. (see illustration)
8. Place treated bricks in 6" pattern to cover main nesting areas.

NOTE: Do not place bricks on ledges where they may fall or get knocked off creating drop hazard. In these areas, pretreat areas and glue directly on ledges, HVAC units or other raised equipment. Use silicon removable adhesive if areas are aesthetically sensitive since Barrier Bond will leave stains.

9. Treat any new areas immediately if gulls move to new spots.

## ONE FINISHED DISC ON BASE

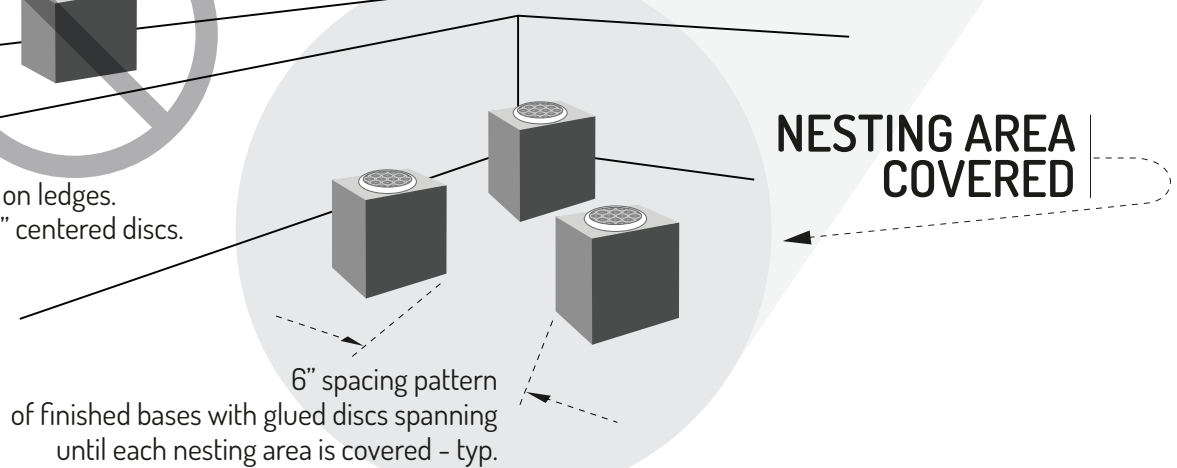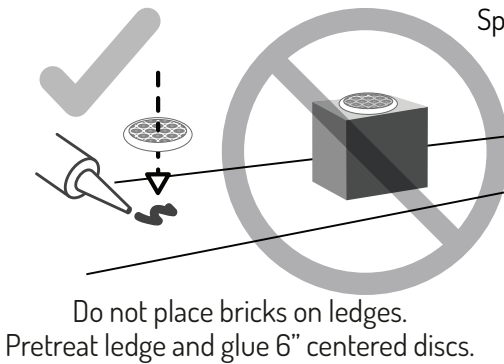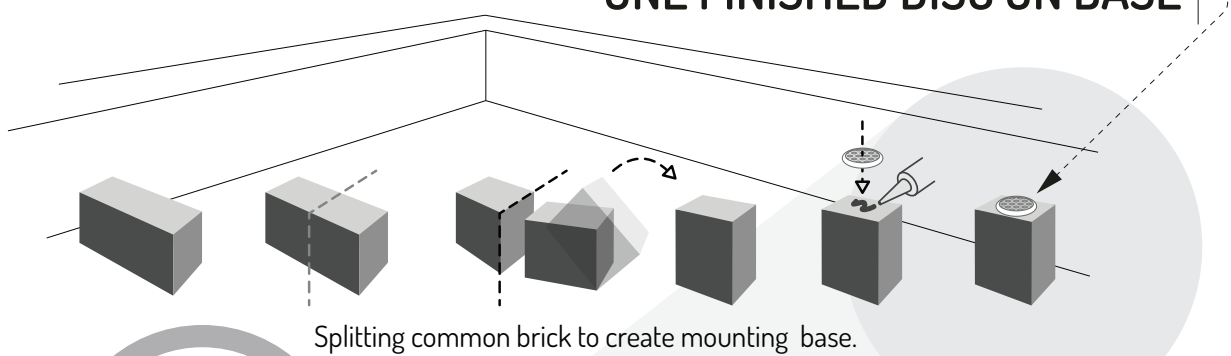

Call for additional trade assistance · 800 503 5444  
Or email us a quick install question · [customer@birdbarrier.com](mailto:customer@birdbarrier.com)