




MADE IN THE USA

**KEYSCO TOOLS**  
**DIVISION OF S&H INDUSTRIES, INC.**  
5200 Richmond Road • Cleveland, OH 44146  
Phone 216-831-0550 • Toll Free 800-253-9726 •  
Fax 216-831-9573  
www.shindustries.com  
E-Mail: www.service@shindustries.com  
Rev. 2/8/18

## MOBILE ALUMINUM WINDSHIELD RACK – 73740

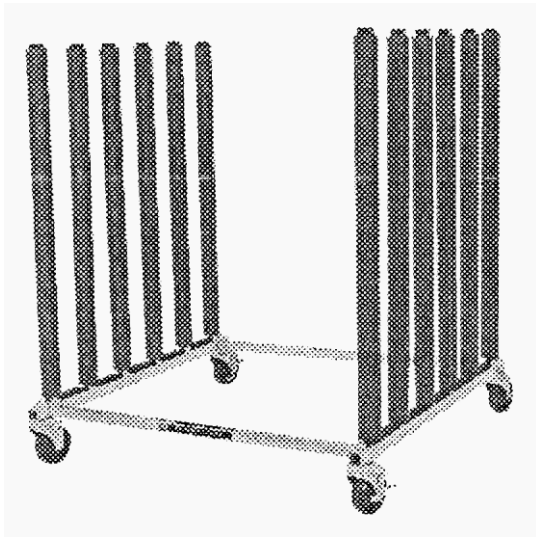

### Tools required for assembly:

7/16" wrench, 7/116" socket and driver

Part	Qty.	Description
12262	2	Cross member assembly
12267	2	Vertical support assembly
11532	12	Upright foam padding
10793	10	1/4" x 1" PSA foam base pads
11381	12	Square end caps
10675	4	2" Bolts
10218	4	Washer
10187	4	1/2-13 Hex nut
12170	2	Swivel caster
12171	2	Swivel caster with lock

### Step 1 – Attach cross members to upright assemblies

*Parts required: 2 upright assemblies, 2 cross members, four 2" bolts and 4 washers*  
Place cross member between the uprights and fasten in place with bolt and washer.

### Step 2 – Attach square end caps

*Parts required: 12 square end caps*  
Place square end caps on to the tops of the upright support arms.

### Step 3 – Attach upright foam pads

*Parts required: 12 upright foam pads*  
Slide foam covers on to support bars. Remove adhesive strips and bond the cover to itself.

**Note: Do not remove strips prior to placing on the support bars. The adhesive bonds quickly.**

### Step 4 – Attach foam base pads

*Parts required: 10 foam base pads*  
Attach the foam base pads between each of the uprights.

### Step 5 – Attach casters to completed windshield rack

*Parts required: 2 swivel casters with lock, 2 swivel casters, 4 caster nuts*  
Attach the swivel casters with caster nuts.