


551-410 Baseball Backstop without Hood

551-411 Baseball Backstop with Hood

IMPORTANT

Please retain this instruction sheet in your files. It contains important maintenance instructions, as well as replacement parts information.

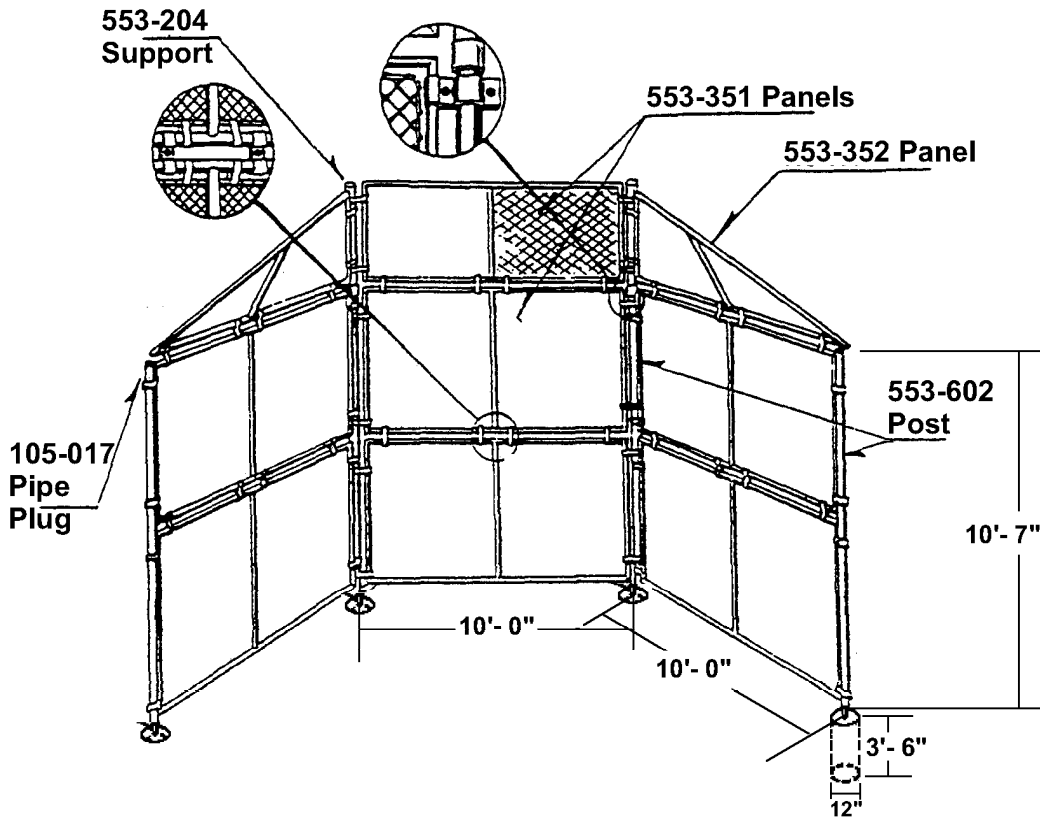

551-410 WITHOUT HOOD

1	CTN		Hardware Bag
6	WF	553-351	Panels
4	PIPE	553-602	2 3/8" OD x 13'0"
			<u>HARDWARE BAG</u>
4		105-017	2 3/8" Pipe Plug
12 pr		551-511	1" x 1" Saddle Clamps
24 pr		555-512	1" x 2 3/8" Saddle Clamps
			Clamps
48		126-505	5/16" x 1 1/4" Carriage Bolts
			Bolts
12		116-504	5/16" x 1" Hex Bolts
60		326-501	5/16" Lock Washers
60		216-501	5/16" Hex Nuts

551-411 WITH HOOD

1	CTN		Hardware Bag
2	PIPE	553-204	Hood Support
7	WF	553-351	Panel
2	WF	553-352	Panel
4	PIPE	553-602	2 3/8" OD x 13'0"
			<u>HARDWARE BAG</u>
4		105-017	2 3/8 OD Pipe Plugs
			Clamps
24 pr		555-511	1" x 1" Saddle Clamps
			Clamps
32 pr		555-512	1" x 2 3/8" Saddle Clamps
			Clamps
64		126-505	5/16" x 1 1/4" Carriage Bolts
24		116-504	5/16" x 1" Hex Bolts
88		326-501	5/16" Lock Washers
88		216-501	5/16" Hex Nuts
1		416-400	3/4" Socket Key
2		196-803	1/2" x 3/4" Socket Set Screw

1 CTN 6 WF 4 PIPE 11 Total Pcs.
480# Total Weight CLASS 70

1 CTN 9 WF 6 PIPE 16 Total
Pcs. 530# Total Weight CLASS 70

551-410 Baseball Backstop without Hood

551-411 Baseball Backstop with Hood

Page 2
Rev 05/22/08

TOOLS NEEDED FOR THE JOB:

Post Hole Digger
Level
15 cu. ft. of Pre-Mix Concrete

Crescent Wrench
5/16" Socket Wrench

GENERAL ASSEMBLY INSTRUCTIONS

1. Check each piece carefully and remove any sharp projections that may have been caused by shipping.
2. DO NOT Tighten nuts more than hand-tight until the entire assembly is completed.
3. All threaded ends of bolts protruding beyond nuts should be cut off and peened over to remove any sharp edges.

SPECIFIC ASSEMBLY INSTRUCTIONS:

1. Mark and dig footing holes as shown on page one.
2. Assemble one center section of backstop on ground with bottom of upright posts at the front edge of the footing holes.
3. Hand-tighten all bolts securely.
4. Raise assembly into position in footing holes.
5. Assemble each additional section in a similar manner. Raise and attach to sections already in place.
6. **(for 551-411 model only)** Add hood sections.
7. Plumb and level backstop. Tighten all bolts securely.
8. Pour footings. Place bricks or old cement chunks below the posts to allow wet cement under the post.
9. Allow 48 hours to allow concrete to dry before using the equipment.

MAINTENANCE:

Check periodically for loose bolts and/or broken parts and tighten or replace them immediately.