


Amphenol


WPS Boot Installation Instruction Before 7/16 Type Connector Assembly

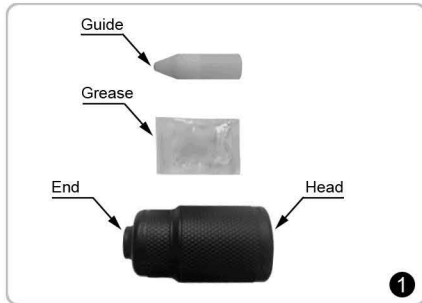

Assembly tools (required).



Wipe the WPS Boot with grease.
If the WPS Boot has been wiped with grease,
this process can be ignored.

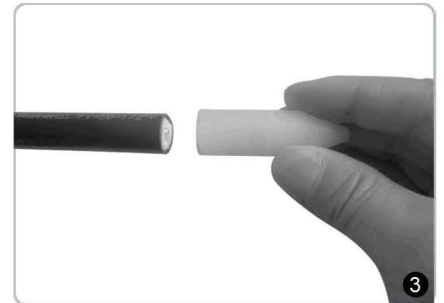

Put on the guide.



Put on the WPS Boot.



Take off the guide.



Assemble the connector according to
connector installation instructions.
The surface of connector should be smooth.



Screw the jumper onto the panel.



Tighten with torque wrench.
Recommended torque is 25N·m.




Push on the WPS Boot until the jumper
connection part being fully covered.



Finished.

Amphenol

WPS Boot Installation Instruction After 7/16 Type Connector Assembly

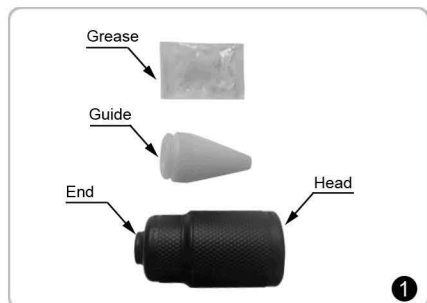


Assembly tools (required).




Screw the guide into the connector.



3

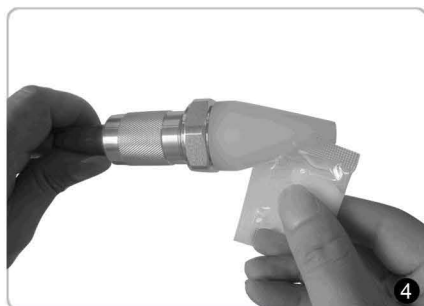

Wipe the guide with grease.
If the WPS Boot has been wiped with grease,
this process can be ignored.

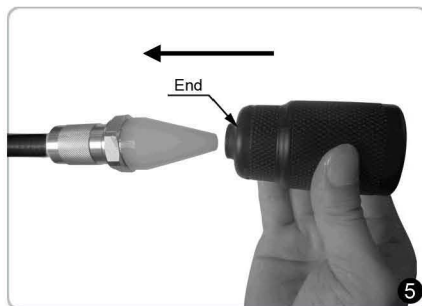

Push the WPS Boot to the jumper via
the guide. (The small inner hole towards
the cable.)



6



Take off the guide.



Screw the jumper onto the panel.



Tighten with torque wrench.
Recommended torque is 25N·m.



Push the WPS Boot until the jumper
connection part being fully covered.



Finished.