

Installation Guide


Kubota Series Mirror PN: 2766

Mirror can be mounted on either the right or left side.

Kubota Models: M108SHC, M108SHDC/HDC2/DSC/DS, M504DTC, M5040DTC-1, M5040FC, M5040FC-1, M5040HDC, M5040DTC-1, M5-091HDC, M5-091HDC12, M5-091HFC, M5-111HDC, M5-111HDC12, M5-111HDC24, M5-111HFC, M5140DTC, M5140FC, M5140HDC, M6040DTC, M6040DTC, M6040PC-1, M6040FC-1, M6040PC-1, M6040PC-1, M6040FC-1, M6040FC-1, M6040FC-1, M6040PC-1, M7040DTC-1, M7040DTC-1, M7040FC-1, M7040HDC, M7040HDC-1, M7040HDC-1, M7040HDC-1, M7040HDC-1, M7040HDC-1, M7040HDC-1, M7040HDC-1, M8540DTC-1, M8540DTC-1, M8540DTC-1, M8540HDC-1, M8540HDC-1, M8540HDC-1, M8540HDC-1, M9540HDC-1, M9540HDC-1, M9540HDC-1, M9540HDC-1, M9540HDC-1, M9540HDC-1, M9540HDC-1, M965DSC, M9960HDC, M9960HDC-12, M9660HDC-24, M9960HFC

- 1. Attach mounting bracket to cab with a 5/8 -11 x 4 bolt nut and lock washer and a 5/16-18 x 1 bolt, nut and lock washer.
- 2. Fasten the mirror arm assembly to the mounting bracket with two 5/16-18 x 1 full thread bolts, flat washers, lock washers and nuts.
- Insert the small tube into the mirror arm assembly and secure with the plastic mirror knob.
- 4. Fasten the mirror head to the small pipe with the 2" clamp and included hardware.



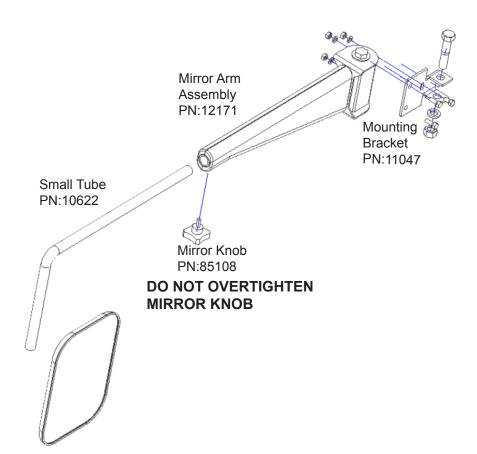

Phone: 1.800.328.1752 / Website: www.tractorseats.com