


Instruction Guide

JD 4010 3-Piece Assembly

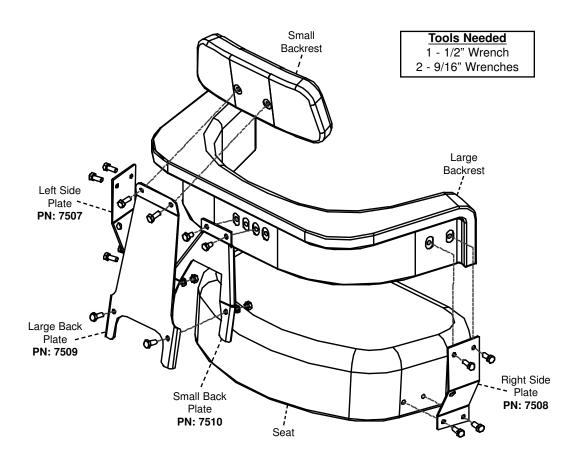

- 1. Bolt the right side plate and the left side plate to the seat using four 5/16" x 3/4" bolts. The large hole on the side plates goes towards the back of the seat.
- 2. Bolt the large backrest to the left and right side plates using four 5/16" x 3/4" bolts.
- 3. Attach the small back plate to the large backrest using two 5/16" x 1/2" bolts. The center of the small back plate should be aligned with the center of the large backrest.
- 4. Attach the large back plate to the small back plate using two 5/16" x 3/4" bolts, lock washers and nuts.
- 5. Bolt the small backrest to the large back plate using two 5/16" x 3/4" bolts.