


**Original Grammer  
OEM Seat**

Deluxe  
Mechanical  
Suspension  
PN: 6083



**Note!**

Weight needs to be applied to the suspension to turn the mechanical knobs.

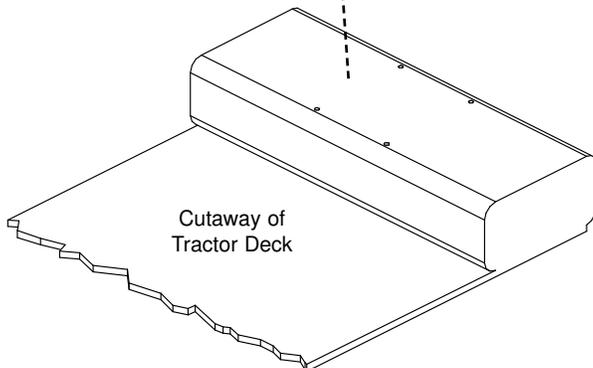

Cutaway of  
Tractor Deck

**Installation Instructions to Place a  
Mechanical Suspension with the OEM  
Grammer Seat in a Ford 7410, 7700, 7710,  
7810, 7910, 8210, 8630, 8700, 8730, 8830,  
9030, 9700 or TW Series Tractor**

1. Remove the original seat and suspension mechanisms.
2. Bolt the suspension to the tractor deck using the original bolts. **Drilling will be required.**
3. Fasten the seat to the suspension with four 5/16" x 3/4" bolts and flange nuts.