

1004 Uni Pro Seat
& Suspension
PN: 7892




Note!


Weight needs to be applied to the suspension to turn mechanical knobs.

Installation Instructions to Replace an IH 86/88 Original Mechanical Suspension with a 1004 Uni Pro Seat and Suspension


1. Remove the original seat and suspension from the tractor.
2. Fasten the PED IH 86 to the seat support compartment with four 5/16" x 1" bolts and flange nuts. For additional height, use four 5/16" x 2" bolts and 1" long tube spacers.
3. Bolt the seat and suspension assembly to the pedestal with four 5/16" x 1" bolts, 7/16" spacer nuts and flange nuts.
4. Locate a power source and connect the suspension to power and ground.

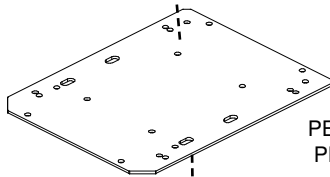

PED IH 86
PN: 6017



1" Tube Spacers
Optional
(Used when additional height is needed.)

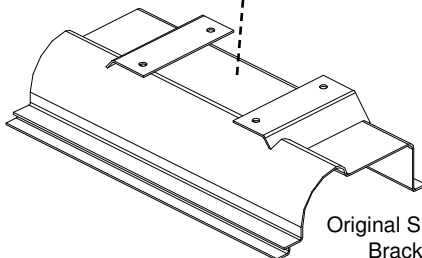

Original Support
Bracket