


Installation Guide 6750/6751


1000/1003 Uni Pro
 Seat Assembly PN:
 8165 (1000 Uni Pro)
 or PN: 8170 (1003
 Uni Pro)



1000/1003 Seat to
 6077 PED SAP
 PN: 6079

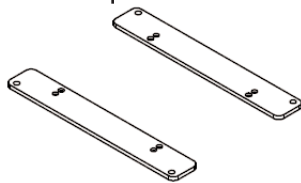

JD 8000 Series
 PED
 PN: 6077

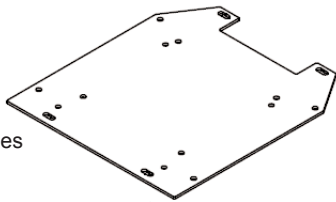

Existing Tractor
 Pedestal

Installation Instructions to Place a 1000 or 1003 Uni Pro into a JD 8000/8010 Series Tractor

1. Remove the original seat and suspension. Keep the bolts used to mount the original seat.
2. Bolt the 6079 SAP plates to the bottom of the seat suspension using the 8mm x 20 mm flat head socket cap screws. See diagram below on which holes to use when bolting the SAP plates to the seat.
3. Bolt the JD 8000 Series PED to the tractor where the original seat was mounted using the original bolts.
4. Mount the JD Command Arm Bracket to the seat. Use the instructions provided in the box containing the JD Command Arm Bracket. This step can also be done when the seat is in the tractor.
5. Place the seat in the tractor and fasten to the JD 8000 Series PED using the 5/16" x 1" bolts and flange nuts.
6. Mount the command arm to the command arm bracket.
7. Connect the wiring harness to the seat and suspension and then to the socket in the back of the cab where the original seat harness connected.

