




441 Uni Pro
Black Vinyl
PN: 8021



KM MSG83
Mechanical
Suspension
PN: 8079

Note!
Weight needs to be applied to the suspension to turn the mechanical knobs.

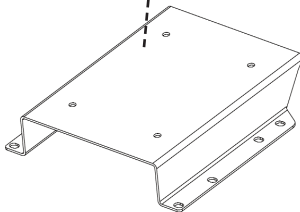

PED IH 65
PN: 6010

Installation Instructions to Place a 441 Uni Pro and Mechanical Suspension in an IH 656, 666, 686, Hydro 70/86 Series and 504 Farmall Tractor

1. Remove the original seat and suspension mechanisms.
2. Slide the bottom half of the slide rails off of the new 441 Uni Pro seat. Mount the lower half of the the slide rails to the top of the suspension using the 8mm x 12mm socket head cap screws. NOTE: If the slide rails have studs in the bottom half they will need to be pounded out.
3. Loosen the bolts holding the top half of the slide rails on the seat. Adjust them to align with the lower half of the rails on the suspension and re-tighten.
4. Bolt the suspension to the pedestal with four 5/16" x 5/8" bolts and flange nuts.
5. Bolt the suspension and pedestal assembly to the tractor casting with the original bolts.
6. Slide the rail and seat assembly on to the suspension.