


Installation instructions for replacing Vangaurd seat with K&M 236 Seat

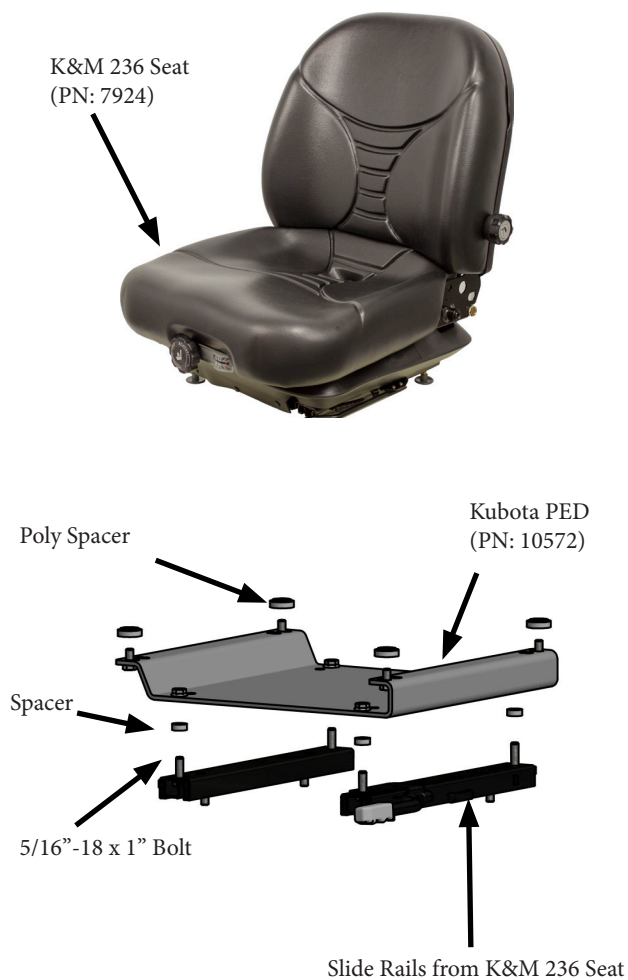

1. Remove the slide rails from the bottom of the seat. Make sure to save the bolts and poly spacers as they will be used to fasten the Kubota PED to the new seat bottom.
2. Insert the 5/16"-18x3/4" Hex Thread Cutting bolt into the 4 most outside holes on the bottom seat plate to cut threads into the holes. Simply hand start the bolt straight into the hole and continue to turn with wrench until bolt is bottomed out, then remove bolt. These holes should have a front to back measurement of 11 1/2" and side-to-side measurement of 12 1/2".
3. Connect the wire harness to the operator presense switch under the seat cushion. Route the harness out the back of the seat.
4. Install the slide rails onto the Kubota PED using (4) 5/16"-18 x 1" bolts, spacers and 5/16"-18 flange nut. Make sure to place the bolt in the direction shown to the left. Note the location of the handle for slide rail adjustment.
5. Install the Kubota PED (PN: 10572) on the bottom of the seat using the original bolts used to hold the slide rails on the bottom of the seat. Bolt the PED using the 4 most outside holes that you cut threads into in step 2. Place the (4) poly spacers that were removed from between the seat and slide rails between the PED and the seat. Please note the orientation of the plate from the diragram on the left.
6. Install the K&M 236 seat onto the tractor. Insert the 4 studs on the slide rails into the existing holes on the tractor where the old seat was mounted. Fasten using 5/16"-18 Flange nuts.
7. Attach the wire harness from the seat to the tractor's operator presence plug.