
# V·I·V·©

# Single Monitor and Laptop Mount

Instruction Manual

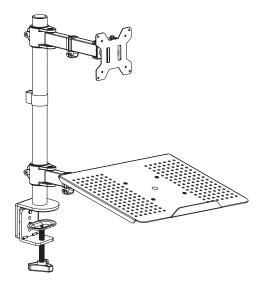

# SKU: STAND-V002C



Scan the QR code with your mobile device or follow the link for helpful videos and specifications related to this product.

https://vivo-us.com/products/stand-v002c



help@vivo-us.com





www.vivo-us.com

# MARNING!

If you do not understand these directions, or if you have any doubts about the safety of the installation, please call a qualified technician. Check carefully to make sure there are no missing or defective parts. Improper installation may cause damage or serious injury. Do not use this product for any purpose that is not explicitly specified in this manual. Do not exceed weight capacity. We cannot be liable for damage or injury caused by improper mounting, incorrect assembly or inappropriate use.

# 1 TIPOVER WARNING

SERIOUS OR FATAL CRUSHING INJURIES CAN OCCUR FROM TIPOVER. TO HELP PREVENT TIPOVER:

- NEVER ALLOW CHILDREN TO CLIMB, STAND, HANG, OR PLAY ON ANY PART OF MONITOR OR STAND.
- USE TIPOVER RESTRAINT OR ANCHOR STAND TO WALL

USE OF TIPOVER RESTRAINTS MAY ONLY REDUCE, BUT NOT ELIMINATE RISK OF TIPOVER.

# 🗥 WARNING: CHOKING HAZARD

SMALL PARTS - NOT FOR CHILDREN UNDER 3 YEARS. ADULT SUPERVISION IS REQUIRED.



TOOLS NEEDED



DO NOT EXCEED WEIGHT CAPACITY. Failure to do so may result in serious injury.




Figure 3

# ASSEMBLY STEPS

#### STEP 1

#### **OPTION A: Clamp Installation**


- Install the "C" Clamp Brace (c) to the Pole (a) using 3pcs M5x14 Bolts (f), and tighten using the Allen Key (o), see Figure 1.
- Attach Soft Pad (w1) to the "C" Clamp Brace (c), see Figure 2.
- Install the "C" Clamp (b) to the pole assembly according to the thickness of the desktop. The thickness can be changed to three positions. Connect it using 2pcs M8x12 Bolts (g), and tighten using the Allen Key (o). Tighten the "C" Clamp (b) to the desktop using the plastic knob, see Figure 3.

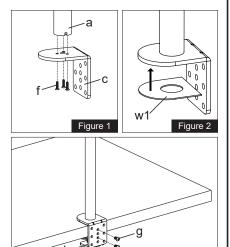

Plastic Kno

#### **OPTION B: Existing Grommet Base Installation**

- If the existing grommet hole comes with a plastic protector, remove it to ensure a flat surface before installing the desk mount. Install the Grommet Base Plate (m) to the Pole (a) using 3pcs M5x14 Bolts (f), and tighten using the Allen Key (o), see Figure 4.
- 2. Attach Soft Pad (w2) to the Grommet Base Plate (m), see Figure 5.
- Position the Pole (a) on the mounting surface and secure using the Support Plate (j), M10 Washer (k), Spring Washer (l) and M10 Bolt (i). Fasten the M10 Bolt using provided Wrench (p), see Figure 6.

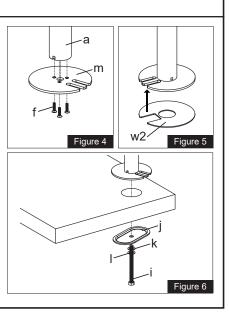


## STEP 1 (Continued)

(p), see Figure 9.

OPTION C: Self-Drilled Grommet Base Installation
Position the Pole (a) on the mounting surface and mark the center hole. Drill a 3/8" (10mm) diameter hole at the marked position through the mounting surface. Install the Grommet Base Plate (m) to the Pole (a) using 3pcs M5x14 Bolts (f), and tighten using the Allen Key (o), see Figure 7.
Attach Soft Pad (w2) to the Grommet Base Plate (m), see Figure 8.
Position the Pole (a) on the mounting surface and secure using the Support Plate (j), M10 Washer (k), Spring Washer (l) and M10 Bolt (i).

Fasten the M10 Bolt using provided Wrench

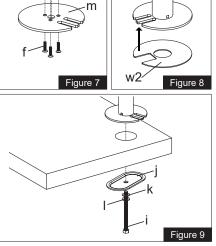



a

## STEP 2


Install Swivel Arms (d) to the Pole (a). Fasten the bolt with supplied Allen Key (o). Attach the Wire Clip (n1) to the Pole (a) and (n2) to the Swivel Arms (d).

### STEP 3

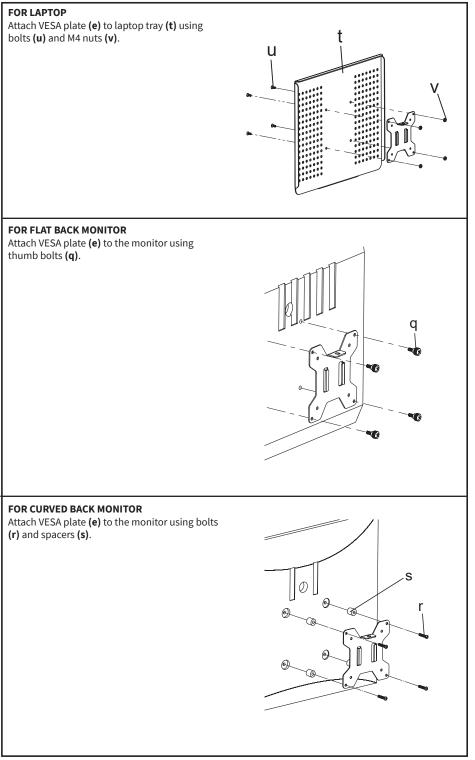


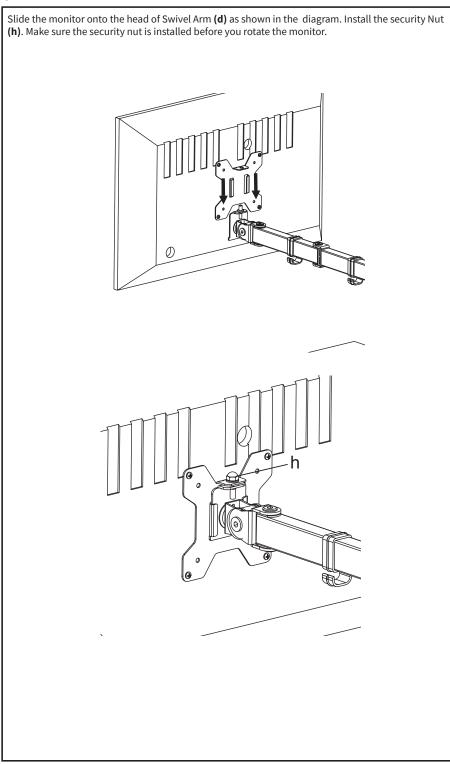

## STEP 5

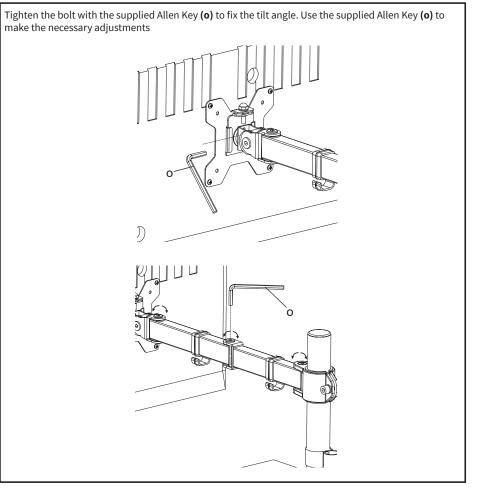

## Adjust as Desired

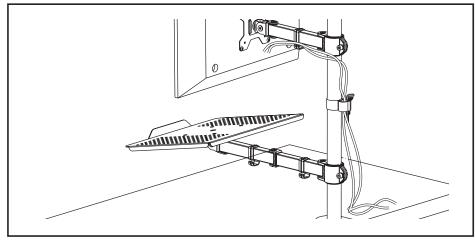





If any parts are received damaged or defective, please contact us. We are happy to replace parts to ensure you have a fully functioning product.







help@vivo-us.com

www.vivo-us.com

For more VIVO products, check out our website at: www.vivo-us.com.