


Triple Monitor Mount

Instruction Manual

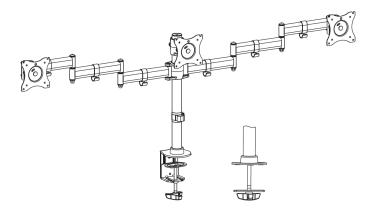

SKU: STAND-V003M



Scan the QR code with your mobile device or follow the link for helpful videos and specifications related to this product.

https://vivo-us.com/products/stand-v003m







№ WARNING!

If you do not understand these directions, or if you have any doubts about the safety of the installation, please call a qualified technician. Check carefully to make sure there are no missing or defective parts. Improper installation may cause damage or serious injury. Do not use this product for any purpose that is not explicitly specified in this manual. Do not exceed weight capacity. We cannot be liable for damage or injury caused by improper mounting, incorrect assembly or inappropriate use.

TIPOVER WARNING


SERIOUS OR FATAL CRUSHING INJURIES CAN OCCUR FROM TIPOVER. TO HELP PREVENT TIPOVER:

- NEVER ALLOW CHILDREN TO CLIMB, STAND, HANG, OR PLAY ON ANY PART OF MONITOR OR STAND.
- USE TIPOVER RESTRAINT OR ANCHOR STAND TO WALL

USE OF TIPOVER RESTRAINTS MAY ONLY REDUCE, BUT NOT ELIMINATE RISK OF TIPOVER.

/!\ WARNING: CHOKING HAZARD

SMALL PARTS - NOT FOR CHILDREN UNDER 3 YEARS. ADULT SUPERVISION IS REQUIRED.

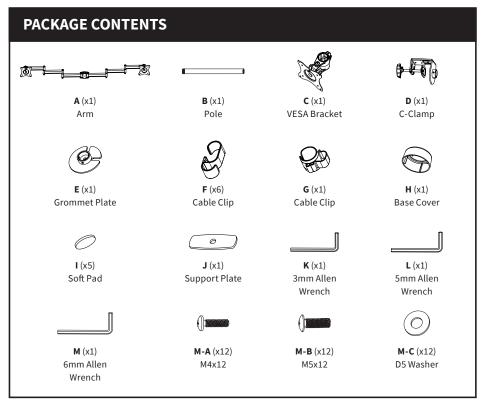

NOTE: NOT ALL HARDWARE INCLUDED WILL BE USED

TOOLS NEEDED




DO NOT EXCEED WEIGHT CAPACITY. Failure to do so may result in serious injury. (7.98 kg

ASSEMBLY STEPS

STEP 1


OPTION A: Clamp Installation

Stick soft pads (I) to bottom of clamp base (D). Slide cable management clip (G) and base cover (H) on to bottom of pole (B). Thread pole (B) onto clamp (D). Tighten grub screws in bottom of clamp (D) using 3mm allen wrench (K). Secure clamp (D) to desktop as shown in diagram.

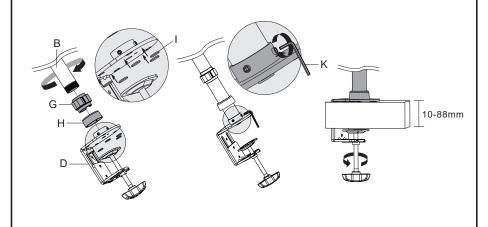


OPTION B: Grommet Base Installation


Remove screw from top of bolt in clamp (D). Stick soft pads (I) to bottom of grommet base (E). Slide cable management clip (G) and base cover (H) on to bottom pole (B). Thread bottom pole (B) onto grommet base (E). Tighten grub screws in bottom of grommet base (E) using 3mm allen wrench (K). Slide metal pad (J) over bolt and slide through grommet hole in bottom of desktop. Thread into bottom of pole (B).

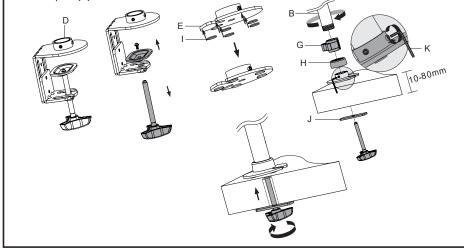


STEP 2

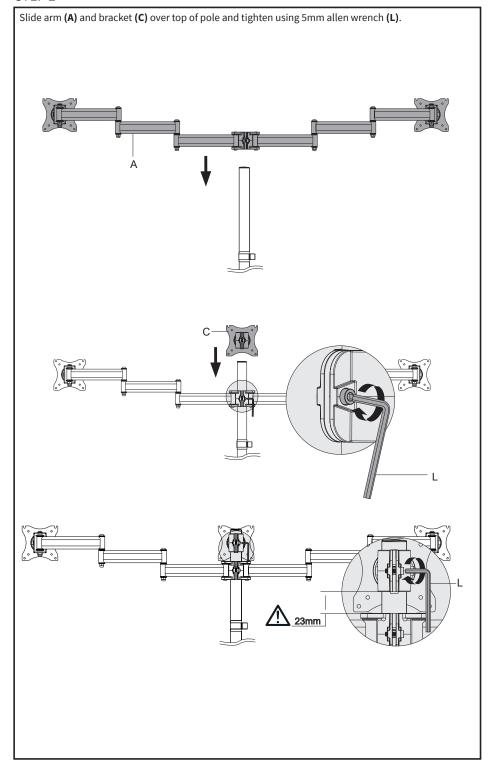

STEP 3

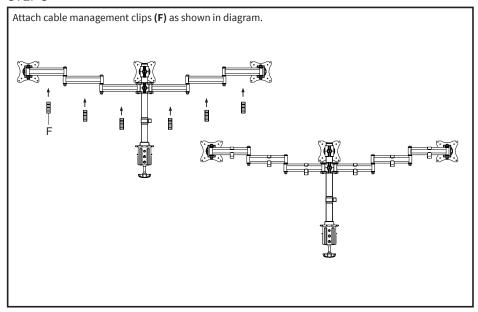


STEP 4

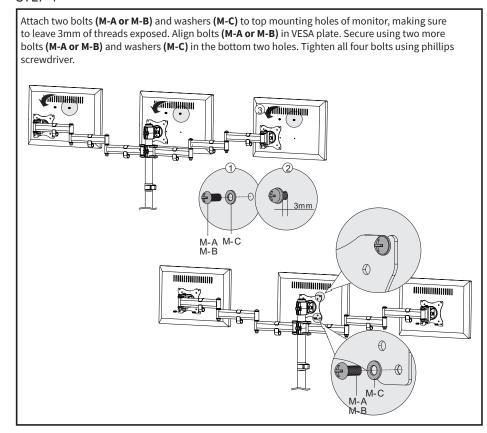


5


STEP 5

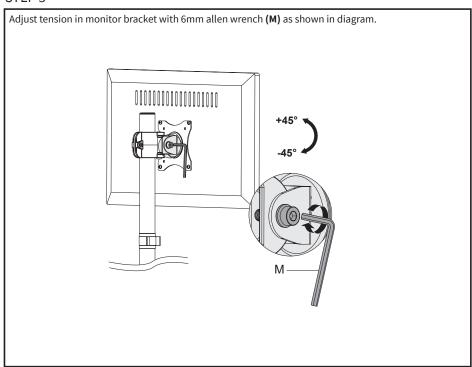

STEP 6

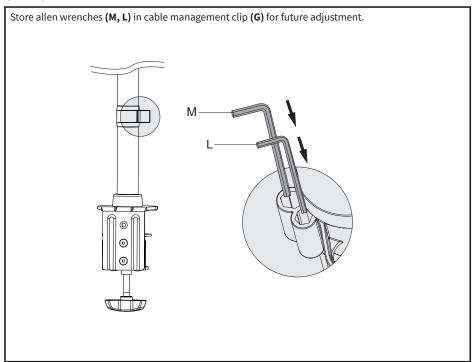

STEP 7

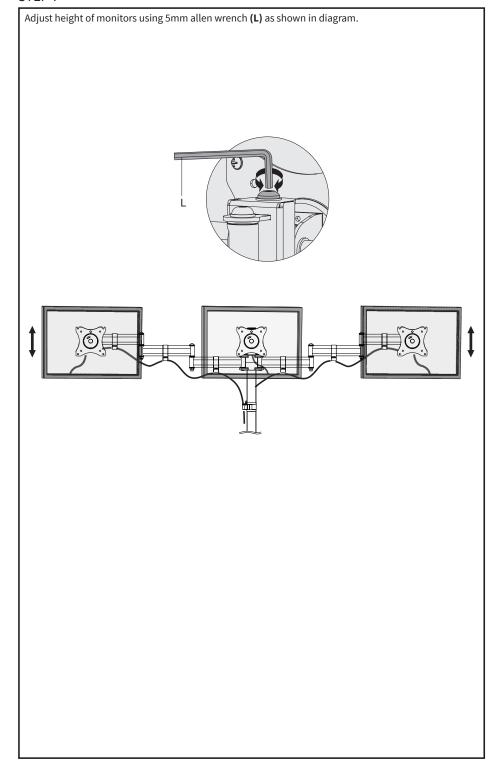



If any parts are received damaged or defective, please contact us. We are happy to replace parts to ensure you have a fully functioning product.







help@vivo-us.com

www.vivo-us.com

1-800-371-5654

For more VIVO products, check out our website at: www.vivo-us.com.