

18000 Universal Camshaft Bearing Tool

Drives Camshaft Bearings Smoothly.

Now, one complete low cost set that will remove or insert camshaft bearings in nearly all engines from compact cars to heavy trucks. Range of 1.125" to 2.69" (28.58 - 68.3mm). EASY ON BEARINGS. The expander has a neoprene sleeve over which the split driving collets are mounted and expanded to size. This tool has two sets of rubber sleeves supplied with it for each expanding collet. The brown sleeves are used when driving thin wall bearings (.065). The black sleeves should be used when driving thick wall bearings (.090). Instruction sheet T18000 provides complete, illustrated operating instructions and parts list.


18000 Universal Camshaft Bearing Tool. Molded Case. Shipping wt. 11 lbs. 4 oz.

Range 1.125" to 2.690". Includes: Driving shaft, driving shaft extension, expander unit, five (5) expanding collets, five (5) sleeve sets, two (2) driving collars, centering cone & blow molded case.

Shipping wt. 17 lb. NSN 5120-00-878-8541

| | DRIVER RANGE TABLE | | |
|-------------------|----------------------|------------|--------------|
| BEARING SIZE I.D. | EXPANDING COLLET # | USE WASHER | SLEEVE SET # |
| 1.125 TO 1.475 | Expander ass'y 18330 | 18430 | 18410 |
| 1.475 TO 1.700 | 18020 | 18430 | 18120 |
| 1.700 TO 1.925 | 18040 | 18420 | 18140 |
| 1.925 TO 2.150 | 18060 | 18420 | 18160 |
| 2.150 TO 2.375 | 18080 | 18420 | 18180 |
| 2.375 TO 2.690 | 18100 | 18420 | 18200 |
| | | | |



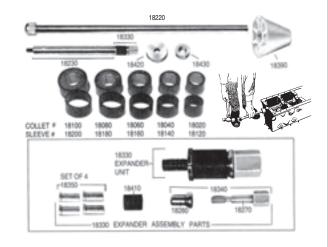

58430 SHAFT IN SEAL PULLER

Removes Cam Shaft and Crank Shaft Seals Without Damage to the Shaft.

Engage the adjustable hook behind the seal. Brace the push rod against the engine head and push the handle to remove the seal. Removes the seal without damage to the shaft.

58430 Shaft In Seal Puller. Skin-packed. Shipping wt. 6 oz.

58500 Hook



U.S. Pat No. 7,600,305

27000 SNEAKY PETE

Removes and Installs Upper Rear Main Seals Without Dropping Crankshaft.

The Lisle 27000 includes everything needed to speed up a long, slow job. Cork screw puller makes it easy to remove old seal. To install new seal, 27000 includes a pulling wire with a removable T-handle and spring steel clip that grips the seal firmly as it is pulled into position. Two extra clips are furnished. Saves many times its cost every time it is used.

27000 Sneaky Pete. Skin-packed. Shipping wt. 2 oz.

27020 Replacement Jaw Clip

