

OWNER'S MANUAL

Truxedo® Lo Pro QT



TRUXEDO®

Lo Pro QT
Patented

PREMIUM SOFT ROLL-UP TONNEAU COVER

P.O. Box 1078, 2209 Kellen Gross Dr., Yankton SD 57078

Phone: 1-877-TRUXEDO (1-877-878-9336) Fax: (605) 664-9304

Web Site: <http://www.truxedo.com>

P/N 1116967 Rev. E

LIFETIME WARRANTY

TruXedo warrants that all new, unused products are free from defects in material and workmanship. This Warranty is effective if the product is properly installed and used for the purpose intended for the life of the product. It applies to the original buyer only. TruXedo's obligation under this Warranty is limited to repairing, or at its option, replacing any part that is returned, transportation prepaid, to TruXedo, Yankton, South Dakota, if the product is, in our judgment, defective. All materials must be accompanied by an RMA (Returned Material Authorization) number requested by and authorized in advance of returning the materials. TruXedo shall not be liable or responsible to supply or pay labor to replace any part found defective, nor shall it be liable for any damages of any kind or nature to person, product, or property.

There are no Warranties for used products or products that have been repaired, altered, modified, subjected to misuse, negligence, accident or ordinary wear and tear. Limitations may apply to logo screen printing. Call 1-877-878-9336 for complete details.

TruXedo products are sold without any express warranty except as set forth above. TruXedo is not obligated to honor warranty claims if Genuine TruXedo parts are not utilized.

DIRECT ALL WARRANTY CLAIMS TO TRUXEDO AT 1-877-878-9336

Register online at www.truxedo.com or mail this form to:
TruXedo, P.O. Box 1078, Yankton, SD 57078-1078

Name: _____
Address: _____
City: _____ State: _____ Zip: _____
Phone Number: _____
Email Address: _____
Date Purchased: _____ Price Paid: _____
Dealer Name: _____
Pickup Make: _____
Model: _____ Year: _____

Product Purchased:
☐ Original TruXedo
☐ TruXedo Lo Pro QT
☐ TruXedoPlus
☐ TruXport
☐ Deuce

OWNER/USER RESPONSIBILITIES

It is the responsibility of the owner/user to read this manual and comply with the operating procedures. The owner/user is also responsible for inspecting the TruXedo® cover, and for having parts repaired or replaced when worn or damaged.

Failure to follow safety instructions and warning labels could result in failure of your cover system and/or personal injury.

MESSAGES TO INSTALLER

- Always wear safety glasses and/or other necessary protective equipment when installing your TruXedo®.
- These instructions are complete for most pickup models. Additional instructions are included, if required for your truck. Please read entire manual before installing your TruXedo®.


COVER MAINTENANCE

Vinyl cover can be hand washed with mild soap and water or cleaned in a car wash. Thoroughly rinse cover to remove any soap residue. Cover can be treated with any vinyl protectant made for tonneau covers. **Never** use silicon, petroleum, or citrus based products on your tonneau cover.

SAFETY INSTRUCTIONS


1. Do not place objects on or against cover or framework.
2. Do not tie cargo to TruXedo framework.
3. **Never** allow children or pets to occupy pickup box while cover is closed.
4. Cover is not airtight. Special care is required to keep cargo clean and dry.
5. Fabric cover won't prevent theft of contents inside truck box.
6. Cover must be rolled fully open and secured with safety straps when towing vehicle backwards.

SIDE RAIL & COVER INSTALLATION

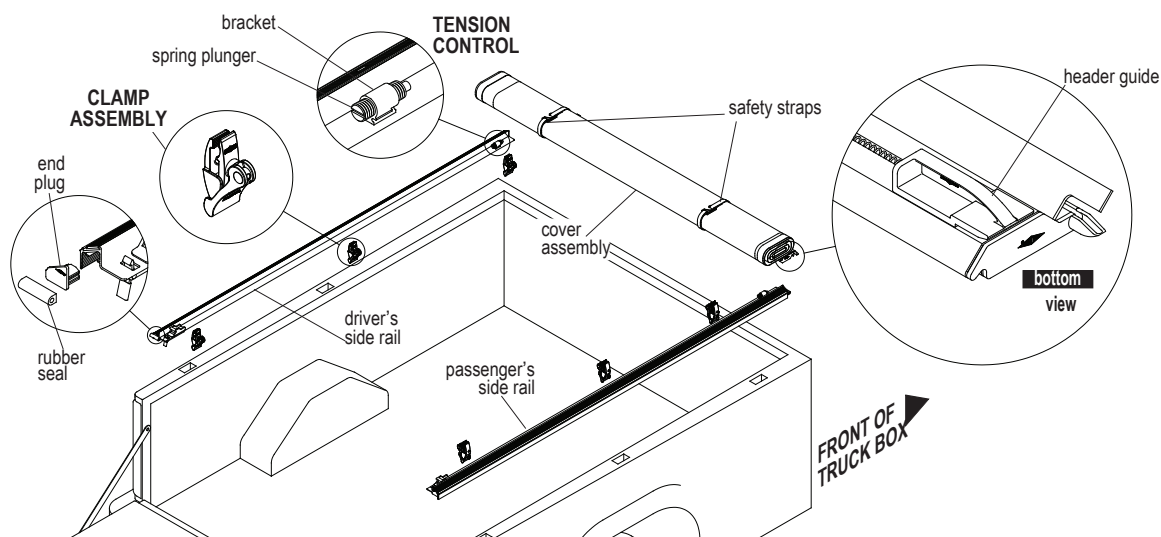


STEP 1: Place front of side rails against front of truck box, flush with box rail and level with each other. Starting at tailgate, evenly space 3 clamps along each side rail, leaving approximately 8" on each end.

Adjust clamp tension by rotating cam lever clockwise to tighten, or rotating cam lever counterclockwise to loosen.

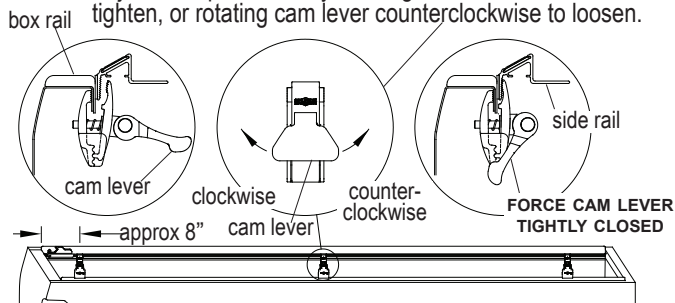


NOTE: High Bed Caps: You may need to adjust the height of the side rails to get a good seal at front and back of cover.


NOTE: If Clamp Will Not Close : Follow Detail A-C to adjust clamps for optimum clamping force.

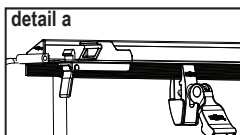

If clamp feels tight but will not close down all the way, as shown in detail A. Rotate clamp handle counterclockwise 90 deg., as shown in detail B.



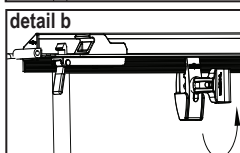


With the clamp handle still rotated counterclockwise 90 deg., push handle closed.

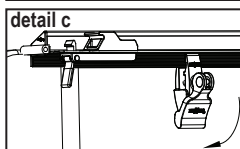

Next rotate the closed handle down clockwise as shown in detail C.


STEP 2: For optimum latching performance and cover fit, side rails must be level. To adjust rails, loosen cam lever and reposition male clamps higher or lower. Tighten all clamps.

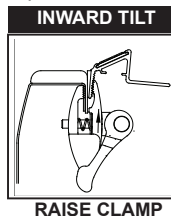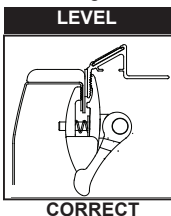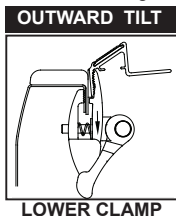


WARNING
Tighten clamps securely on side rails before driving vehicle.

NOTE: Clamp configurations shown are for reference only and are not intended to be standard for all pickups.

STEP 3: Set cover assembly behind cab with header seal on top of rail.

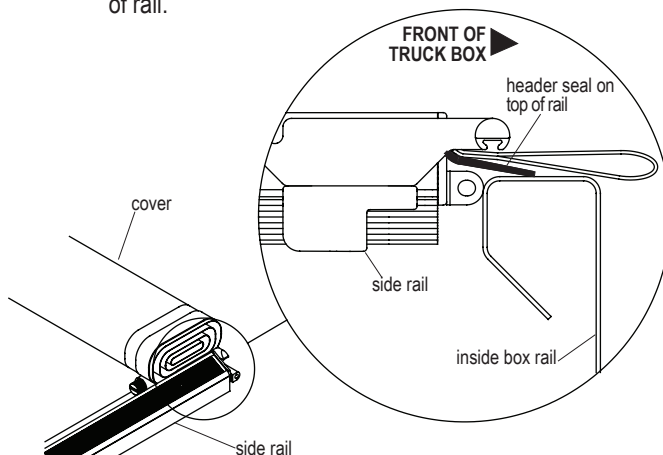


STEP 4: Retract spring loaded header guides. Align header with side rail and release header guides for automatic engagement with side rail. Check to assure header guides are fully engaged with side rail.

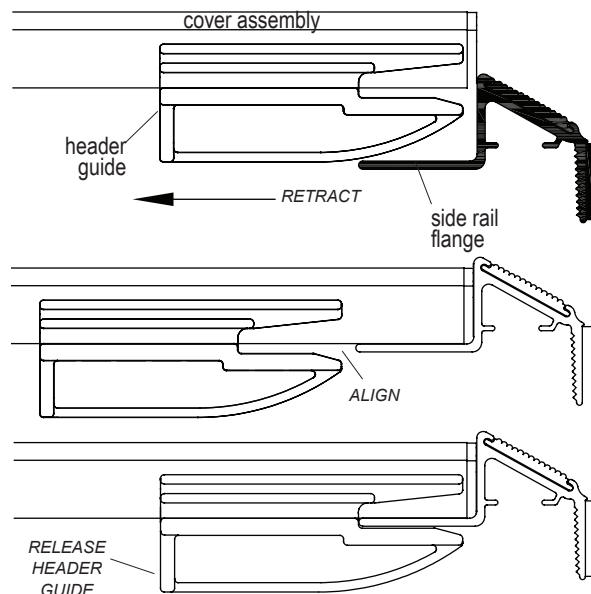


LATCHING & UNLATCHING COVER

STEP 5: Always close cover before closing tailgate.


Unroll cover toward tailgate and rest bows on side rails. Rotate header into header stops and press down to lock toggle into header.

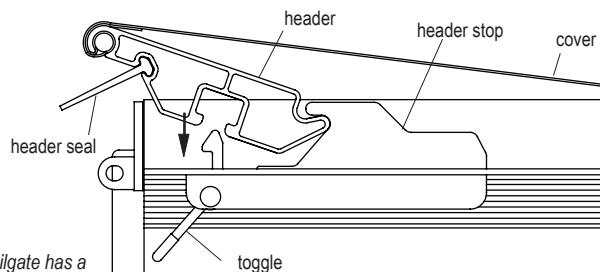

NOTE: If tailgate has a key lock, TruXedo® is secured until tailgate is unlocked and opened.

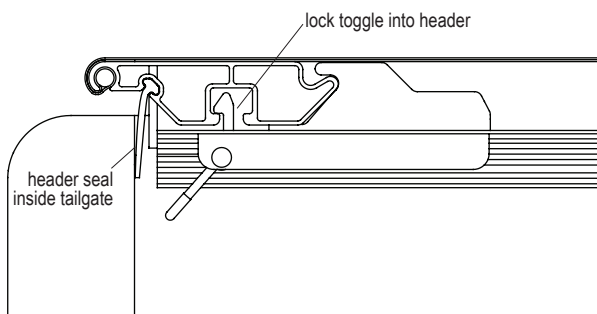


STEP 6: Secure Shur-Bond™ fasteners on one side rail, by pressing along full length of rail. Pull cover tight across pickup bed, and secure Shur-Bond™ fasteners on opposite side rail.

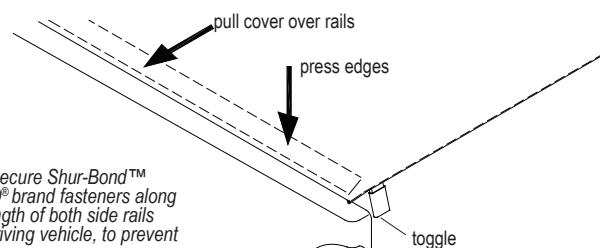

NOTE: Secure Shur-Bond™ VELCRO® brand fasteners along entire length of both side rails before driving vehicle, to prevent wind lift.


STEP 7: To release cover, pull back on toggle. Roll cover toward cab to open. For best results, leave cover fastened to side rails while opening.

STEP 8: Secure cover open by hooking safety straps to front loops.

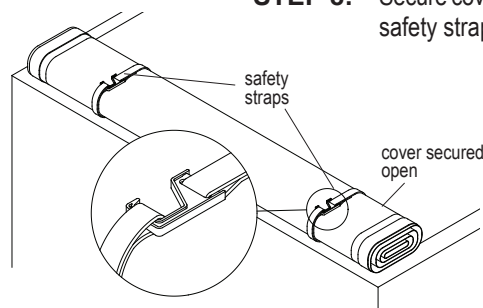

COVER TENSION ADJUSTMENT

EVER-TITE®
AUTOMATIC
TENSION
CONTROL

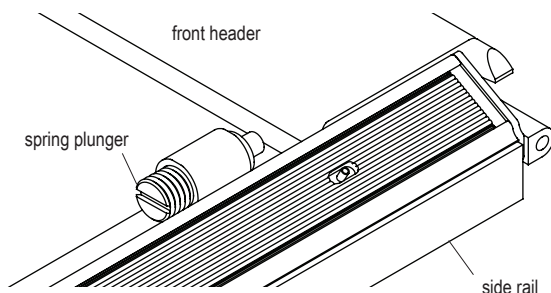


- Spring plunger compensates for material expansion & contraction caused by temperature changes.

- Check cover tension after installation, seasonally, and after extreme temperature changes.

- For best performance, adjust tension regularly to protect your cover against wind wear.


STEP 9: Set tension during **warmest part of day**. With cover closed, release VELCRO® brand loop from both side rails near cab. Check compression of both spring plungers against the front header per diagram. Roll cover open and make adjustments. Close cover and recheck adjustment. Repeat until satisfactory tension has been achieved.

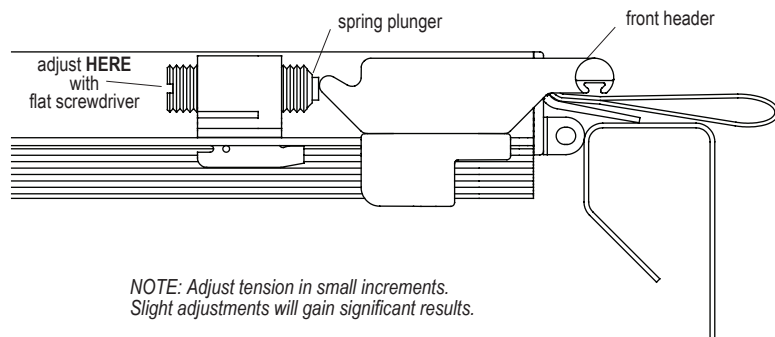

NOTE: Adjust tension in small increments. Slight adjustments will gain significant results.


COVER TOO LOOSE

ROTATE CLOCKWISE

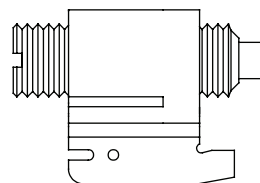

CORRECT TENSION

DURING WARMEST PART OF DAY

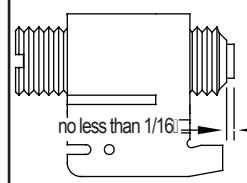

TROUBLE SHOOTING

Questions?

Call our friendly customer service staff at TruXedo Toll Free:

1-877-878-9336

Mon - Fri 8 am - 5 pm CST

HEADER WILL NOT LATCH:


Check side rails to make sure they are level. See Step 2.

Make sure the header seal is not caught between side rail & header.

Check position of side rails on pickup box, they may be positioned too low. See Step 1.

FABRIC COVER IS TOO TIGHT OR TOO LOOSE: See Step 9 to adjust tension.

* VELCRO® is a registered trademark of the Velcro companies.

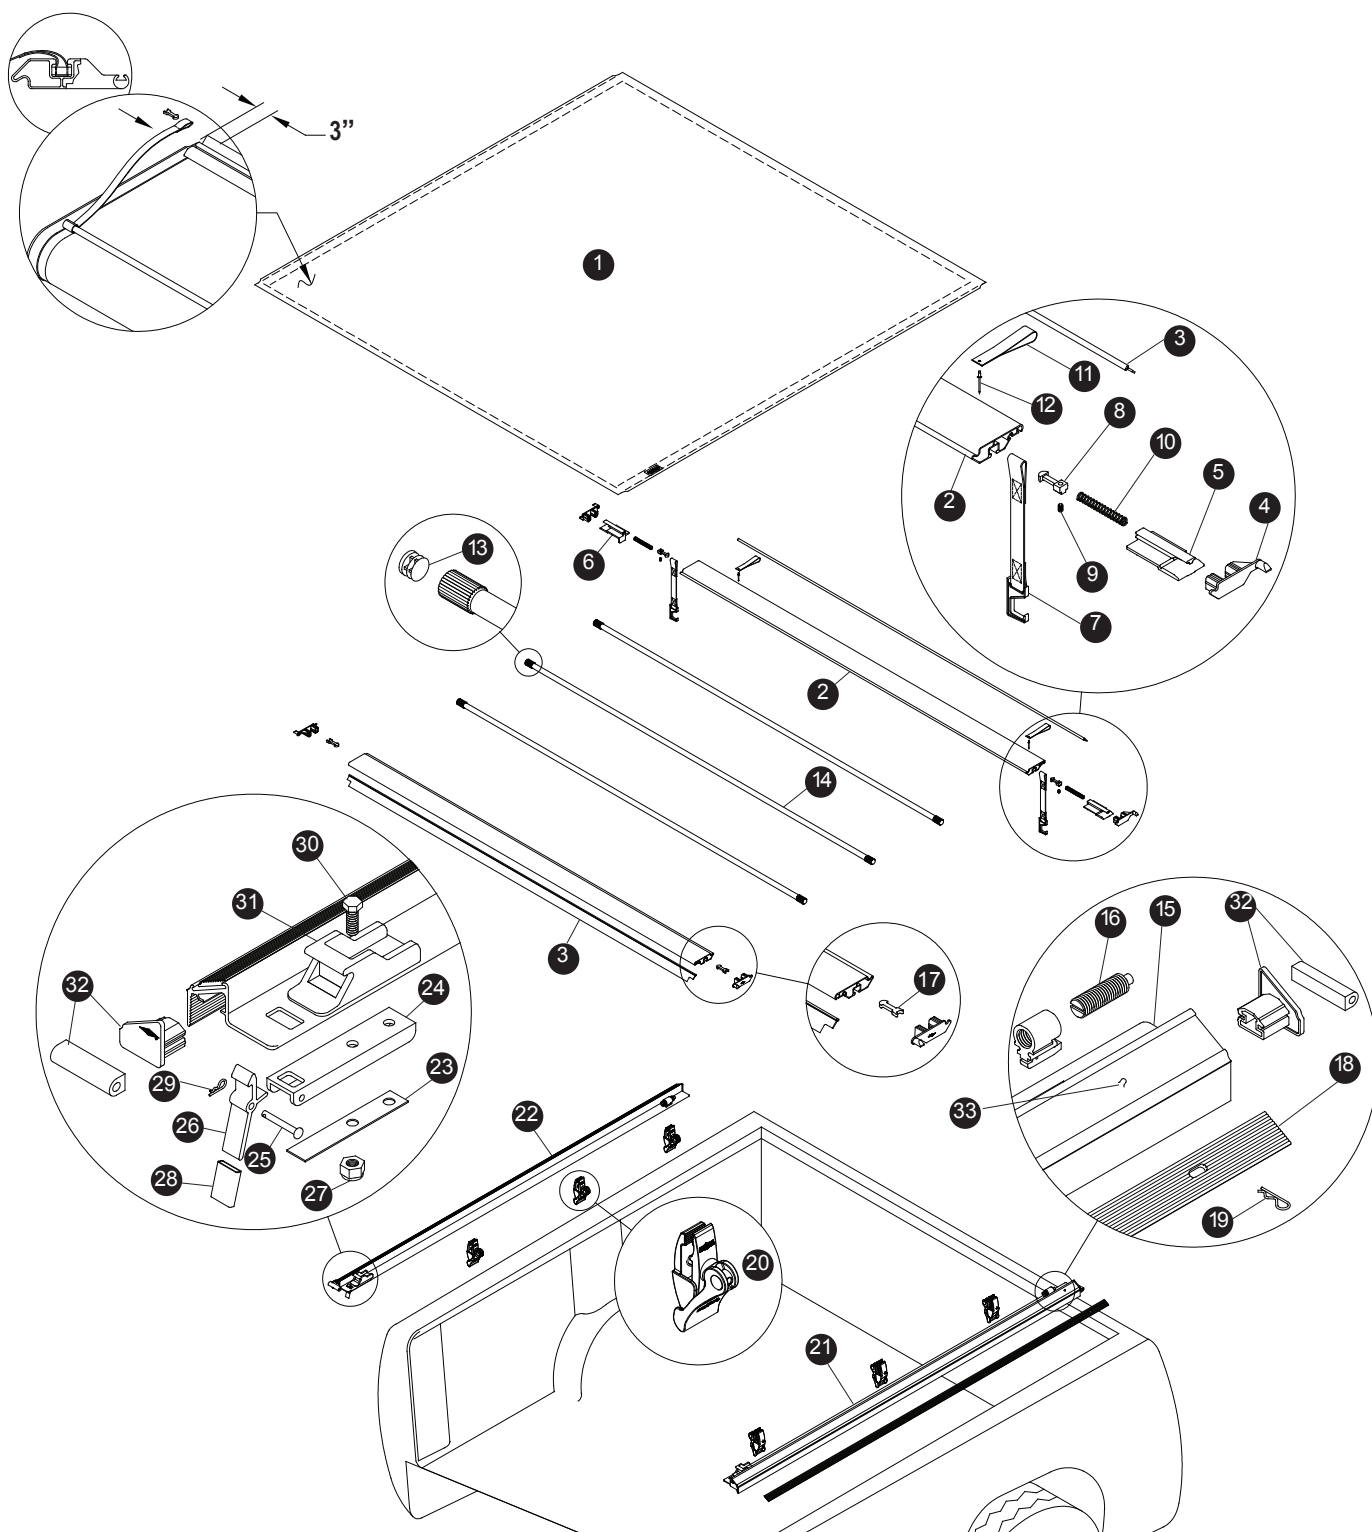

TRUXEDO® LO PRO QT REPLACEMENT PARTS

1	*	TruXedo® Lo Pro QT Replacement Cover	12	1703344	Blind Rivet, 1/8" x 3/16"	23	1114773	Flat Spring, 5/8" x 3 7/8"
2	*	Black Header	13	1701595	End Plug, 1" OD	24	1703650	Latch Main Frame
3	*	Header Seal, Notched	14	*	Black Bow	25	1702610	Clevis Pin, 3/16" x 1 1/4"
4	1115372	Header End Plugs (Set of Two)	15	1702992	Spring Plunger, 5/8" x 2.15"	26	1114888	Toggle
5	1703830	Header Guide, Driver's Side	16	1703260	Tension Control Bracket	27	1700419	Nylon Lock Nut, 5/16"
6	1703831	Header Guide, Passenger's Side	17	1115354	Header Insert Safety Clip	28	1703265	Toggle Cap
7	*	Safety Strap	18	*	Shur-Bond™ VELCRO® Fasteners	29	1702611	Cotter Pin, 3/64" x 19/32"
8	1703832	Header Insert Safety Clip/Guide Stop	19	1703332	Hitch Pin, 1/16" x 1 5/16"	30	1702926	Cap Screw, 5/16" x 7/8"
9	1703895	Socket Set Screw, Hex Hd, 1/4" x 1/2"	20	1116896	Aluminum Clamp Assy, QT	31	1702801	Header Stop
10	1703846	Compression Spring, 3 1/2" lg	21	*	Side Rail, Passenger's Side	32	1115373	Side Rail End Plugs w/Seal (Set of Two)
11	1115353	Header Safety Strap	22	*	Side Rail, Driver's Side	33	1703345	Spring Pin 1/8 Dia.x 5/16 long

* Please specify length or make and model of vehicle.