


Installation Instructions for Hamper Roll Out

Parts Included:

- A. Hamper basket assembly
- B. Slide bracket assembly
- C. Mounting screw package

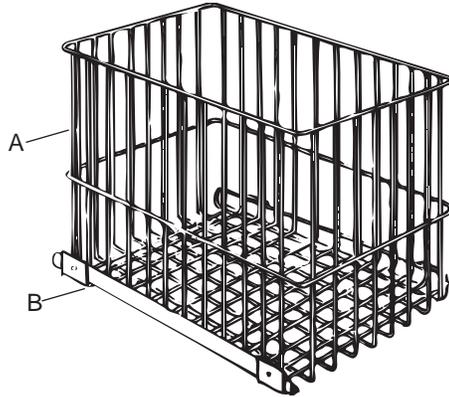

Tools Required:


- A. Phillips screwdriver
- B. Drill with 1/8" bit for pilot holes

Product Assemblies:

- H- 12 15
- H- 12 18
- H- 15 15
- H- 15 18

Step 1

Place slide bracket assembly (B) on cabinet floor 1/2" to 3/4" from front of cabinet. Close door to make sure unit will not hold cabinet door open. Once position is determined, fasten in place using mounting screws provided (C). Optional: mark placement of screws with a pencil, remove unit, and drill pilot holes for fastening screws.

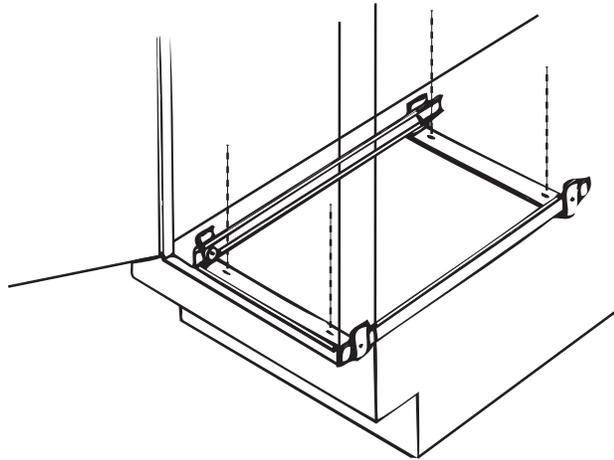

Step 2

Slide hamper basket (A) into slide bracket assembly (B) by inserting wheels on hamper basket (A) into tracks on slide bracket assembly (B). The hamper basket (A) should move freely along the track.

