

# GERSON®

# Elite™

PAINT STRAINER SYSTEM

Complete Contamination Control



Color-Coded Strainers



Available in 4 color-coded micron sizes for easy identification

A revolutionary total system, providing a clean-room manufactured strainer, dust-free storage and "no touch" tab dispensing to ensure that each strainer is 100% contamination-free at final use. Developed to provide the critical increased level of purity required for preparing today's waterborne, basecoat and clear-coat paints and endorsed by the leading manufacturers of refinish paints.

### Clean-Room Produced

Gerson® Elite™ paint strainers are manufactured using Gerson's exclusive fully automated clean-room manufacturing process and spectrographically lot-tested filter material to ensure that each strainer is pure and 100% contamination-free.

### Protected Storage and Dispensing

Gerson® Elite™ strainers are dispensed from the patent-pending Elite™ strainer dispenser that is designed to provide clean, dust-free storage and *No-Touch* tab-dispensing to ensure each strainer is 100% contamination-free at final use.

### Sealed Packaging

Gerson® Elite™ paint strainers are automatically packaged in sealed pods to protect their contaminant-free purity until final use.

### Defect-Free Finish

Manufacturers of today's hi-tech refinish paints, particularly waterborne finishes, mandate cleaner paint processing to ensure defect-free finishing. The Gerson® Elite™ Paint Strainer System delivers superior contamination control to help ensure a perfect finish. The Gerson® Elite™ System is endorsed by major paint manufacturers throughout the world.

### Eliminate the Risk of Finish Re-do


Paint Strainers made by hand contain significant levels of environmental and processing contaminants such as ambient shop-floor dust, hand oils and particulates from process steps, creating an unacceptable contamination risk to expensive paint finishes! Eliminate all contamination risk with the Gerson® Elite™ Strainer System.

# Elite

PAINT STRAINER SYSTEM

**Complete Contamination Control**

## Contaminant-free Storage and Dispensing

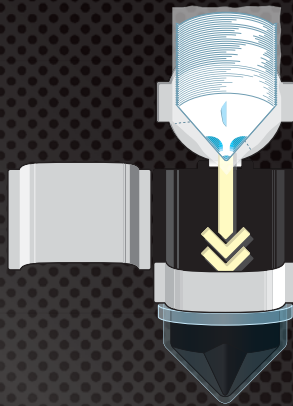

**1.** Place sealed strainer pod into dispenser, with strainer dispensing tabs facing forward.



**2.** Tear away protective plastic along perforations, then remove.



**3.** Close dispenser lid and dispense strainers downward one at a time by use of the dispensing tab.

## ORDERING INFORMATION

### Elite Starter Kits



PART #	DESCRIPTION	MESH COLOR	PACKAGING
012001-010714R	Elite Starter Kit 260 micron	Orange	1 Dispenser + 2 ea., 226 micron pods (250 strainers)
012001-010614Y	Elite Starter Kit 190 micron	Yellow	1 Dispenser + 2 ea., 190 micron pods (250 strainers)
012001-010814B	Elite Starter Kit 150 micron	Green	1 Dispenser + 2 ea., 150 micron pods (250 strainers)
012001-010914B	Elite Starter Kit 125 micron	Blue	1 Dispenser + 2 ea., 125 micron pods (250 strainers)

### Strainers



PART #	MESH DESCRIPTION	MESH COLOR	PACKAGING
010714R	Synthetic 260 micron	Orange	4 Pods; 125 Strainers/Pod, 500 Strainers Total
010614Y	Synthetic 190 micron	Yellow	4 Pods; 125 Strainers/Pod, 500 Strainers Total
010814B	Synthetic 150 micron	Green	4 Pods; 125 Strainers/Pod, 500 Strainers Total
010914B	Synthetic 125 micron	Blue	4 Pods; 125 Strainers/Pod, 500 Strainers Total

### Elite Dispenser



PART #	DESCRIPTION	PACKAGING
12001	Elite Dispenser	1 Dispenser/Box

