



USER MANUAL

UR800QVAC, UR800QVQAC-PR2 and UR800QVAC-H

AUTOMATIC DUSTLESS VACUUM SYSTEMS



CORPORATION

WWW.UNIRAM.COM

- 381 Bentley Street, Markham ON L3R 9T2
- Tel. 1-800-417-9133
- sales@uniram.com

REVISED 2019-03

Follow the procedures to operate this machine safely and effectively. Ensure that this manual is readily available to the operator at all times. If you have any questions about the operation of this machine, contact:

North America: Uni-ram Technical Service 1-800-417- 9133
 Other Continents: Contact Your Supplier

MODELS

MODEL	UR800QVAC	UR800QVAC-PR2	UR800QVAC-H
VOLTAGE	120 V, 50/60 HZ, 2000 W	120 V, 50/60 HZ, 2000 W	220-240 V, 50/60 HZ, 2000 W
SANDERS	NOT INCLUDED	2 SANDERS	NOT INCLUDED

FEATURES AND SPECIFICATIONS


These mobile vacuums are ideally suited for automotive, marine and industrial applications wherever air operated, vacuum-assist tools are used.

- Portable.
- One or two operators can work simultaneously, 20 foot power cord, 16 foot vacuum hose.
- Automatic activation of vacuum by air tool, manual override.
- 2 motors 1,000 W each; Select single or dual vacuum motors, single motor - 1,000 W and dual 2,000 W. Maximum decibel rating at 2,000 W is 70 db. Wattage (power consumption) can be reduced using the Variable Power Adjustment dial.
- There is a bag filter and a Single Cartridge Filter which is standard. High Density Filters are available.
- Electrical outlet for use with one electrical sander.
- Sealed Vacuum: 99” water (2500mm)
- Supply air pressure: 100 -150 PSI (6.510.0 bar)
- Weight: 72 lb / 33 kg
- Motor is a bypass, 2 stage motor for long life and vacuum power. Die cast housing. Internal fan for cooling.
- Shipping Dimensions (WDH): 41 X 23 X 24”
- For use with disposable garbage bags, 28-185.

CATUTIONS AND WARNINGS

- **Use this vacuum with non-hazardous dust. DO NOT use this vacuum with ignitable hazardous dust including alumina and magnesia. Do not use this vacuum with flammable liquids like gasoline.**
- **Repair must be carried out by a qualified technician.**

UR800QVAC

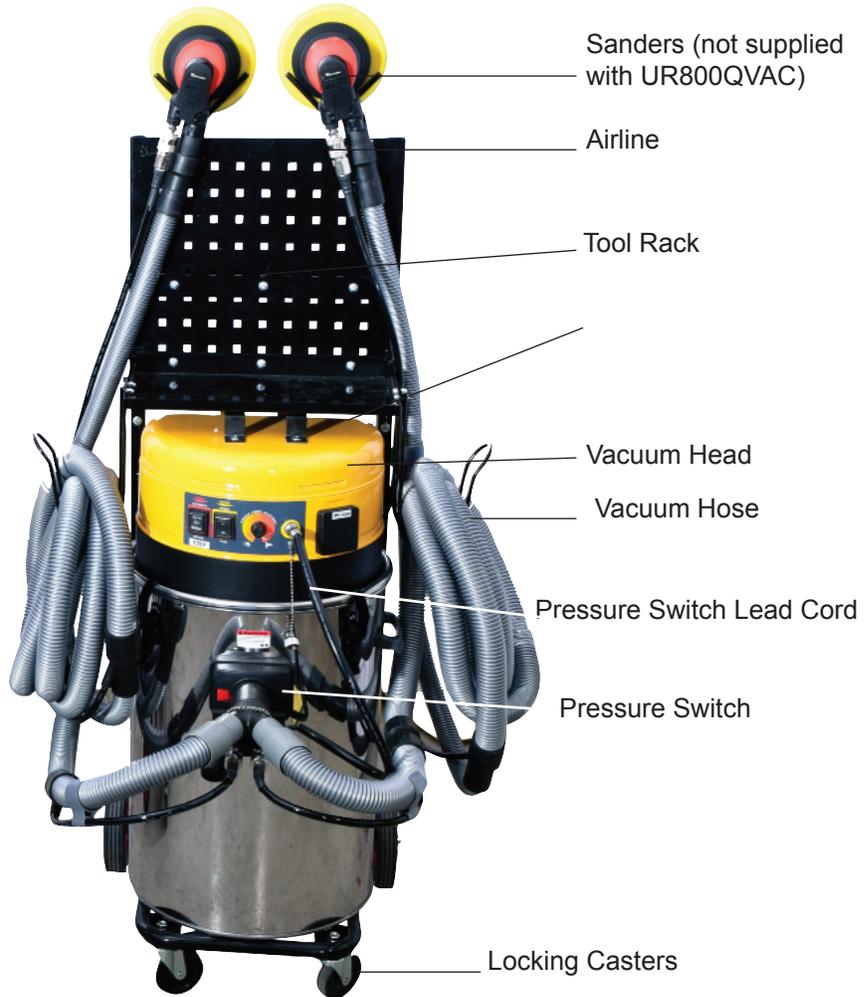


OPTIONS

PART NUMBER	DESCRIPTION
28-724	24 FOOT VACUUM HOSE
28-710	DETAIL KIT WITH HOSE, BRUSH, CARPET TOOL AND CREVICE TOOL.

Assembly of the Detail Kit is provided after the section, REPLACEMENT PARTS.

SETUP

- Check for transportation or handling damage.
- Assemble the Handle, Tool Rack support with shelves and hooks for the hoses. See the instructions below.

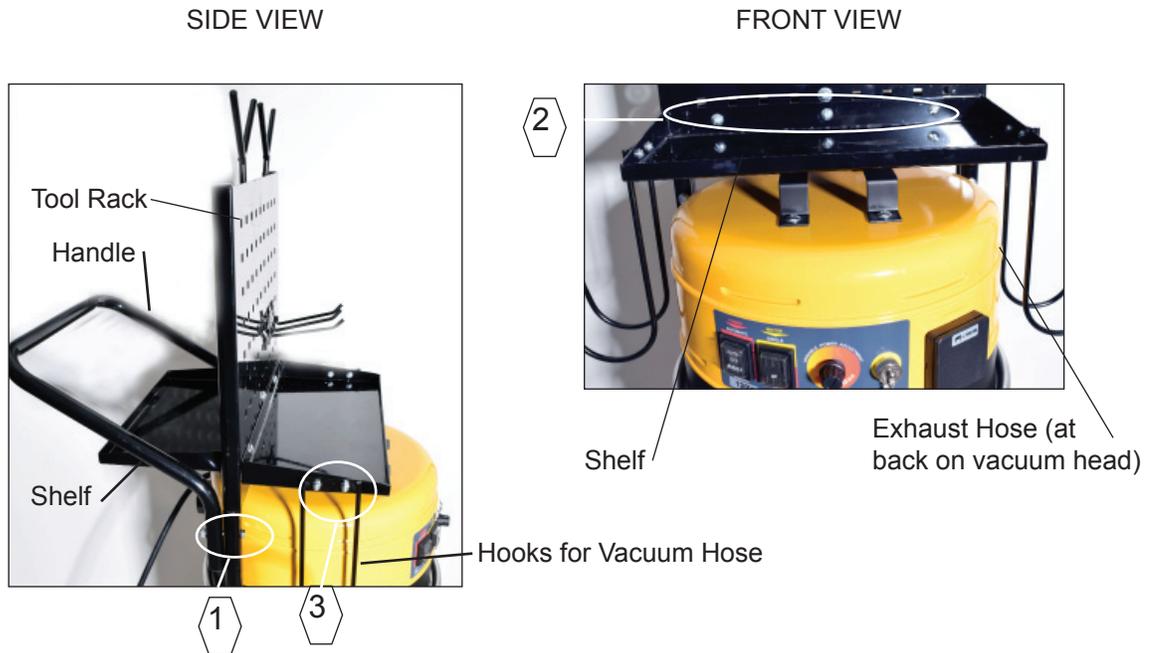


Instructions:

- 1 above) Connect the handle, Tool Rack and frame together. Install bolt, washers and nut (2 sets).
- 2 above) Install bolt, washers and nuts (3 sets) to secure the 2 shelves to the Tool Rack.
- 3 above) Install bolt, washers and nuts (2 sets) to secure the 2 hooks that hold the hose.

- There are 4 clamps that secure the Vacuum Head to the Canister. Check that these clamps are secure. See photo below.
- The Pressure Switch is in a separate carton. Install the Pressure Switch to the canister by using a push in motion. Connect the Short Power Cord of the Pressure Switch to the Control Panel connector on the Vacuum Head. See the photo of the pressure switch below and the photo of the Control Panel. Make sure the connection is secure.
- Install 1/4" NPT male air plug to the female air inlet on the pressure switch. See photo below.

PRESSURE SWITCH

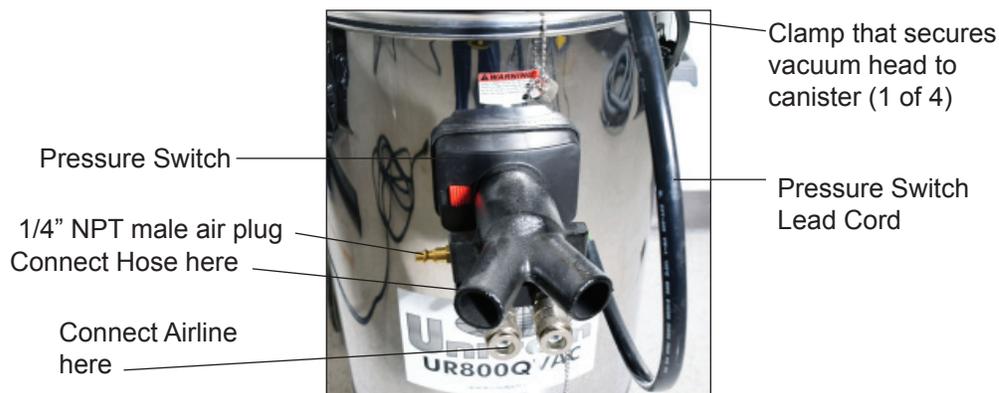

- Connect the two Air Supply Lines and two Vacuum Hoses to the Pressure Switch. See earlier photo of the Pressure Switch.
- Connect the 3.5 ft Exhaust Hose to the exhaust outlet on the back of Vacuum Head. See photo under SETUP.
- Provide at least 100 PSI (7 bar) supply to the air plug on the pressure switch. To ensure dry air use a moisture filter (not provided).
- Connect the Air Tools.
- Make sure the correct voltage is supplied. Plug in the unit. Set On / Off control to Auto. Test the operation of the vacuum and sander. Ensure all air fitting connections are secure without air leakage.

OPERATION

1. ON / OFF CONTROLS FOR VACUUM:

See photo of the Control Panel below.

AUTO Allows the unit to be turned on and off from the Sanding Tools.

OFF Turns the vacuum unit off.


MANU Turns the vacuum on to run continuously.

2. SINGLE OR DUAL MOTOR OPERATION FOR VACUUM

Select DUAL when there are 2 users.

3. VARIABLE POWER CONTROL

The motor speed is adjustable using the Variable Power Adjustment dial.

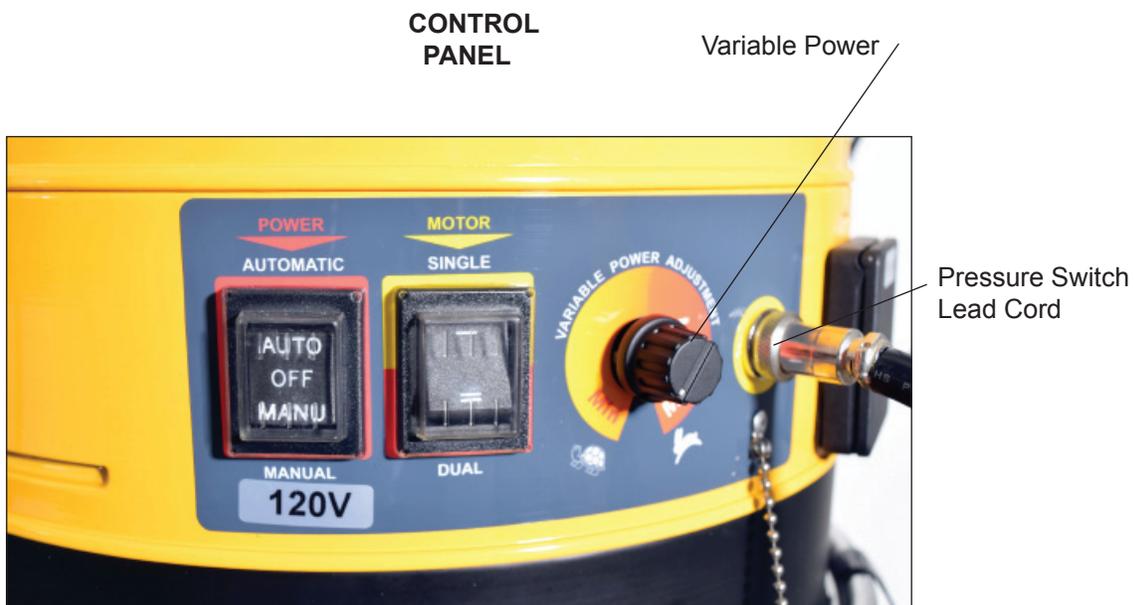

REMOVING THE DISPOSABLE BAG AND CLEAN THE FILTERS


To keep the vacuum operating efficiently, remove and replace the Disposable Bag frequently. Clean the Bag Filter and Cartridge Filter periodically. Replace the Bag Filter and Cartridge Filter as required. These parts are shown in the photos at the bottom of the page. Part numbers are shown on the table to below.

PART NO.	DESCRIPTION
28-185	DISPOSABLE BAG FILTER (5 PACK)
28-171	CARTRIDGE FILTER, REGULAR
28-172	CARTRIDGE FILTER, HIGH DENSITY
28-173	BAG FILTER

To remove the disposable bag or clean the filters first detach the vacuum head.

To Detach the Vacuum Head:

Unplug the unit and detach the short Power Cord from the Pressure Switch on the Vacuum Head. See earlier photo of the Control Panel for the Short Power Cord. The handle and Tool Rack are attached to the frame with a bolt, washers and nut. See photo on right. Remove the bolt from each side and lift the Tool Rack and handle off. Unclamp the Vacuum Head and lift it completely off the Canister. See photo on lower left below.

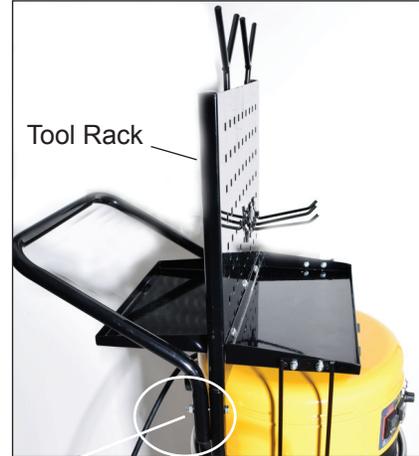


Remove bolt that secures the handle, upright and frame.

To replace the Disposable Bag:

- Remove the Bag Filter and Frame to reveal the disposable bag. See the Bag Filter and Frame on the left photo below.
- Remove and dispose of the Disposable Bag. Install a new disposable bag. It is very important to ensure that the sealing edge of the Bag Filter is secure on the rim of the canister to prevent vacuum leakage. Place the Vacuum Head back on the Canister and clamp securely. Return the Tool Rack and handle to the frame and install the 2 bolts, washers and nut.

Bag Filter and Cartridge Filter

Cartridge Filter Located Under the Bag Filter

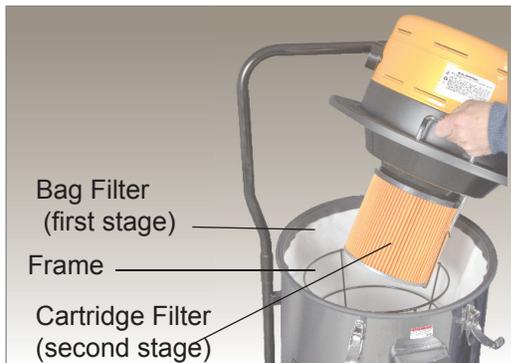

To clean the Bag Filter:


With the vacuum head removed:

- Remove the metal Frame from inside the Bag Filter.
- Remove the Bag Filter and wash with water, squeeze to dry.
- Repeat this step until the water is clean.

To clean the Cartridge Filter:

With the vacuum head removed:

- Slide off the clamping wire and pull off the Filter.
- Vacuum the filter inside and outside using the brush tool of another vacuum.
- Gently spray water into the inside of the filter.
Let the water fill the cavity, then dump the water.
Repeat this step until the water is clean.
- Gently spray water on the outside of the filter to remove the dirt.
- Let the filter air dry, then reassemble.

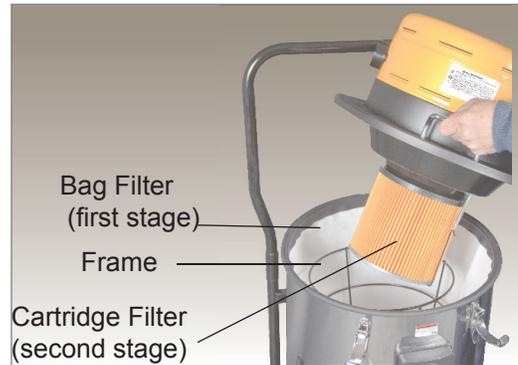

PREVENTATIVE MAINTENANCE

4 replacement brushes come with the vacuum.

When To Replace Brushes:

The brushes are rated for 500 hours. Replace the brushes at the earlier of the first sign of wear or 500 hours of use. The sign of wear is indicated when the vacuum motor, periodically, stops unexpectedly. See Procedure 3 under Troubleshooting on how to replace the brushes.

REPLACEMENT PARTS

PART NO.	DESCRIPTION
28-110	VAC HEAD, 120V, UR800QVAC
28-110H	VAC HEAD, 240V, UR800QVAC-H
28-123	VACUUM MOTOR, UR800QVAC (120v)
28-123H	VACUUM MOTOR, UR800QVAC-H (240v)
28-129	SET OF 2 BRUSHES FOR MOTOR
28-131	PRESSURE SWITCH
28-171	CARTRIDGE FILTER, REGULAR
28-172	CARTRIDGE FILTER, HIGH DENSITY
28-173	BAG FILTER
28-710	DETAILING KIT WITH BRUSH AND OTHER TOOLS
28-716	VAC HOSE + AIR HOSE, 16 FT
28-724	VAC HOSE + AIR HOSE, 24 FT
28-185	DISPOSABLE BAG (5 PACK)

OPTIONS

ASSEMBLY OF DETAILING KIT (P/N 28-710)

See photo below for each step.

Connect the open end of the hose to the Hose Shaft using the thread on the Hose Shaft.


Connect the Hose Shaft to the Shaft Extension. Use one or two pieces of Hose Extension.

Connect the other end of the hose to the Vacuum.

Connect a tool to the Hose Shaft. Tools are shown at the bottom of the page.



TOOLS

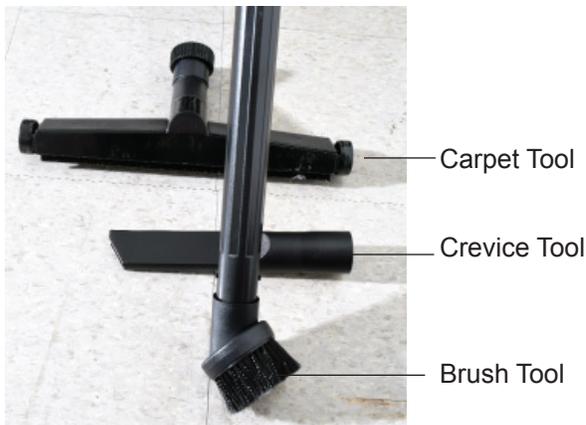

TROUBLE SHOOTING GUIDE


<p>Vacuum does not start when sander starts.</p>	<ul style="list-style-type: none"> • Set Auto / Off / Manu control to MANU setting. • Ensure short Power Cord of the Pressure Switch is securely attached at the Control Panel. • Ensure shop air supply is at least 100 psi. • Adjust air control on sander to full open. • Check the piston in the Pressure Switch - See Procedure 1 under Troubleshooting. • Call factory at 800-417-9133 if above steps do not solve problem.
<p>Vacuum does not stop once sander is turned off.</p>	<ul style="list-style-type: none"> • An air leak can cause this problem. Check for compressed air leakage at Male Air Plug and at the sander. Secure connections. Use teflon tape. • Check the piston in the Pressure Switch - See Procedure 1 under Troubleshooting.
<p>Vacuum turns on without activating sander.</p>	<ul style="list-style-type: none"> • An air leak can cause this problem. Check for compressed air leakage at male air plug and sander. Secure connections. Use teflon tape.
<p>Vacuum motor stops unexpectedly while operating.</p>	<p>See Procedure 3 under Troubleshooting to replace the brushes.</p>
<p>Receive a shock when sanding</p>	<p>There is an interruption in the grounding system. See Procedure 3 under Trouble Shooting.</p>
<p>Vacuum does not pick up debris</p>	<ul style="list-style-type: none"> • Replace Disposable Debris Bag, if required. • Clean Bag Filter and Canister Filters, if required. • Check for air leak where Bag Filter sits on the rim of the canister and check for air leak where the vacuum hoses connect at the sander and at the vacuum.
<p>Auto/ Off/ Manu Switch does not work.</p>	<ul style="list-style-type: none"> • Confirm power at the receptacle. Call factory if this does not solve the problem.

TROUBLESHOOTING PROCEDURES


Procedure 1, Check the Piston in the Pressure Switch:

If the piston at the pressure switch does not slide smoothly a) the vacuum will not turn on when the sander is started and b) will not turn off when the sander is stopped. The aim of this procedure is to check to see if the piston slides smoothly and freely in its cylinder. If it doesn't sand the piston surface to allow it to slide smoothly.


Unscrew the Air Plug at the pressure switch (see photo on right).

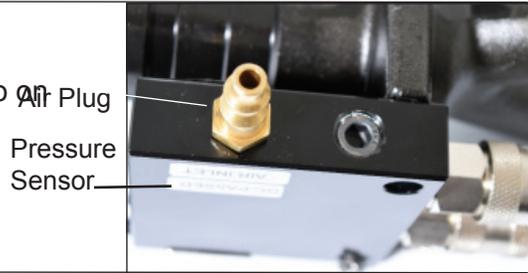


The top of the piston is revealed.

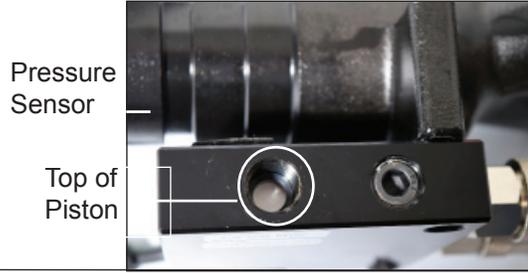


Push the piston with the blade of the screwdriver to see if the piston slides smoothly and freely. If it does, stop this procedure and return the air plug. The cause of the problem is not the piston. If the piston does not slide smoothly and freely continue with this procedure.

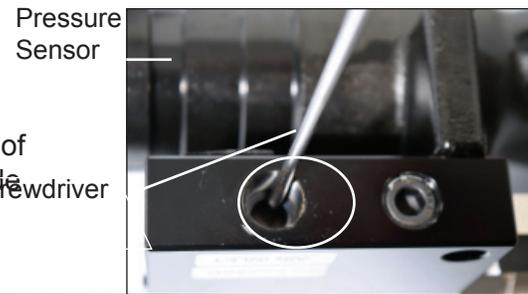

Turn the pressure switch over to reveal the bolt and ground wire. Remove the screw holding the ground wire.

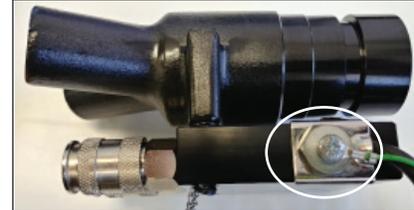

Unscrew the bolt and slowly pull the assembly shown in the photo to the right out of the cylinder. Check the piston for burrs and sand where necessary and clean. Once finished, return the piston to the cylinder and reassemble.

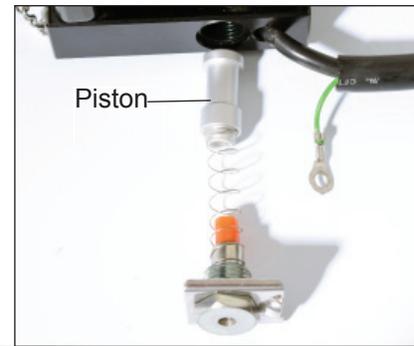

TROUBLE SHOOTING PROCEDURES

Procedure 2, Grounding:

The operator can receive a shock if there is an interruption in the grounding system. The purpose of this procedure is to locate the interruption in the grounding system.


Use a multi meter to determine continuity at the coupler at the sander and the ground prong of the plug. See the photo on right. The dial on the multi meter is set to CONTINUITY. The black lead is on the COM jack and the red lead is on V Resistance jack. If there is continuity stop this procedure unless there is an interruption in the grounding system in the building. Otherwise continue with this procedure.

Lead at coupler at the sander



Check for continuity between the coupler at the sander and the coupler at the vacuum. If there is no continuity repair or replace the vacuum hose. Otherwise continue with this procedure.


Pressure Switch

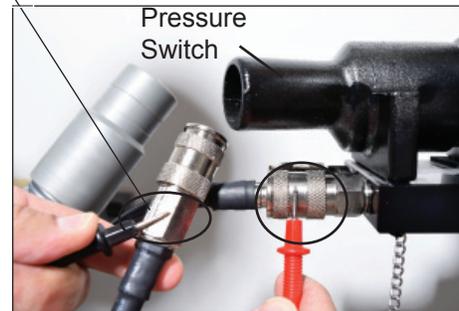

Check for continuity between the coupler at the vacuum and the connection of the Pressure Switch Lead Cord at the vacuum head. See the photo on right. If there is not continuity repair the ground wire of the pressure switch or improve the connection of the pressure switch at the vacuum head. If there is continuity continue with this procedure.

Pressure Switch Lead Cord

Lead at coupler at the pressure switch of vacuum

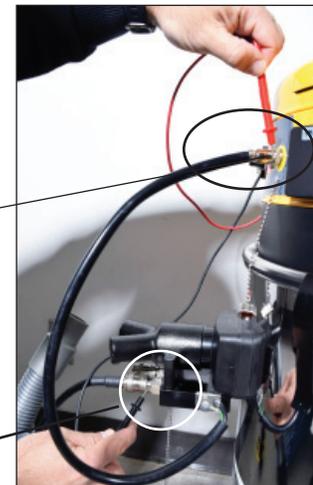

Check for continuity between the connection for the Pressure Switch Lead Cord and the grounding bus. If there is no continuity repair the connections.

Connector for Pressure Switch Lead
Grounding Bus



TROUBLESHOOTING PROCEDURES

Procedure 3, Replace the Motor Brushes:

The brushes are rated for 500 hours. Replace the brushes at the earlier of the first sign of wear or 500 hours of use. The sign of wear is indicated when the vacuum motor, periodically, stops unexpectedly. There is also an instructional video on the Uni-ram web site, www.uniram.com describing how to replace the brushes. Go to www.uniram.com, then the tab “Miscellaneous”, then “Testimonials”, then “Industrial” to locate the video.

To Detach the Vacuum Head:

Unplug the unit and detach the short Power Cord from the Pressure Switch on the Vacuum Head. The handle and upright are attached to the frame with a bolt, washers and nut. See photo on right. Remove the bolt from each side and lift the Upright off. Unclamp the Vacuum Head and lift it completely off the Canister.



Remove bolt that secures the handle, upright and frame.


Remove the screws that hold the handles and the vacuum head in place. Remove the vacuum head.



Remove the 4 bolts that hold the inner vacuum head in place. Remove the vacuum head.




There are 2 brushes per motor.

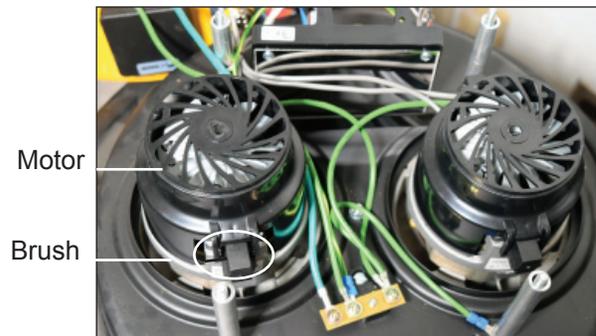


There is a tab on each side of the brush. Use the blade of the screw driver to pry open each tab. Lift the black casing as you pry. Once both tabs are released, lift the casing off.

Tab
Screwdriver


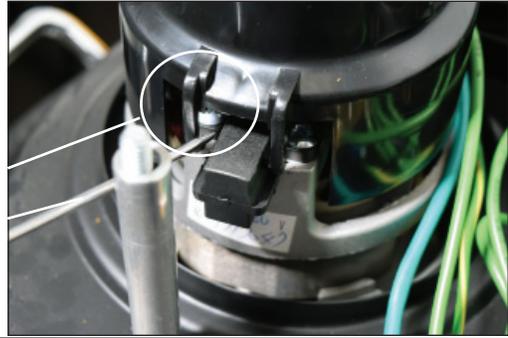


Disconnect the wire from the connector near the brush. See the photo at right. Remove the 2 screws that hold the brush with a screwdriver.

Wire
Screwdriver
Screw

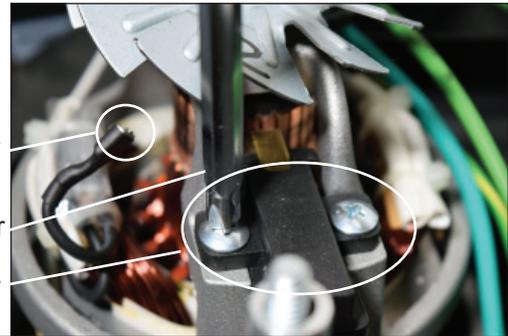


Lift and twist the brush as you pull the brush out. Use a similar twisting motion to install the new brush.

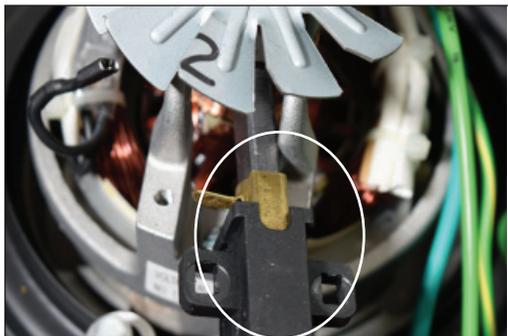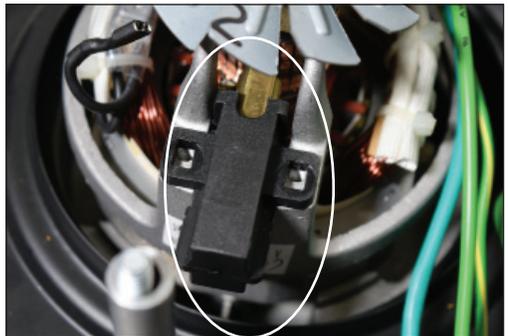


Push and hold the brush to align the screw holes. Insert and tighten the screws.

Brush

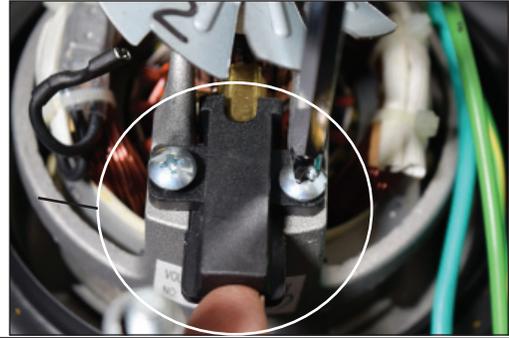

Connect the black wire.

Black Wire

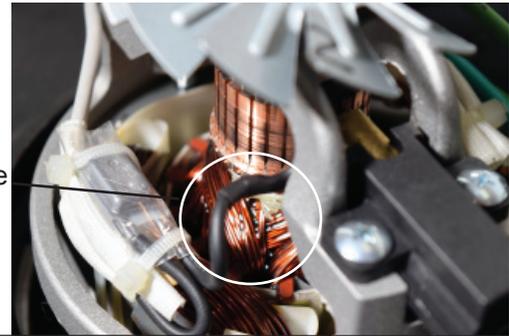

Follow the above procedure to replace the second brush on the motor.

Install the black casing. Use the blade of a screwdriver to pry the tabs wider.

Once complete, replace the inner vacuum lid, vacuum lid and upright support. Instructions for removal is provided on the first page of this procedure.



Screwdriver

Brush

Full Product Warranty

This Uni-ram product has been engineered and manufactured to high performance standards. Each unit has been subjected to detailed factory testing before shipment.

This product comes with a one-year full warranty from the date of purchase. Uni-ram Corporation reserves the right to repair or replace the unit, free of charge, to the original purchaser if a part is found to be defective in material or workmanship as determined by factory service personnel.

Uni-ram reserves the right to direct the customer to ship the unit collect to the Uni-ram factory or to an approved Service Center for repair using the Uni-ram Returned Goods Procedure or to repair the unit on-site. To prevent damage in transport, the purchaser must ship the unit in the original packaging or use alternate packaging of equal quality. All units must be shipped clean and free of debris or liquids.

Conditions of Warranty:

As Uni-ram Corporation has no control over the working conditions or circumstances under which the purchaser stores, handles or uses the product, Uni-ram makes no warranty or claim, either expressed or implied with respect to this product's fitness for any purpose or the result to be obtained from its use. This condition applies to the sale of all products and no representative or distributor of Uni-ram Corporation has the authority to waive or change these conditions.

This warranty applies only to the original purchaser and does not apply if the unit has been misused, overloaded, neglected, altered or used for any purpose other than those specified in the operating and installation instructions. Deterioration due to normal wear is not covered by this warranty. Damage due to accident, transportation, fire, floods or acts of God is also not covered. Units whose serial numbers have been altered or removed are not covered. Unauthorized attempts at self-repair or alterations by the owner also invalidate this warranty. Interior or exterior finishes are not covered by this warranty.

Consumable Items are not covered by this warranty.

This warranty replaces all other warranties expressed or implied by statute or otherwise.

To make a claim, call Uni-ram Service at 1-800-417-9133 and quote the serial number of the unit.